


Users Manual of GT2560

Rev A+

Compiler: kris.mao Date: Jan04, 2016

Reviewer: Alina, Le mon Date: Jan04, 2016

Approver: Linda.Fan Date: Jan13, 2016

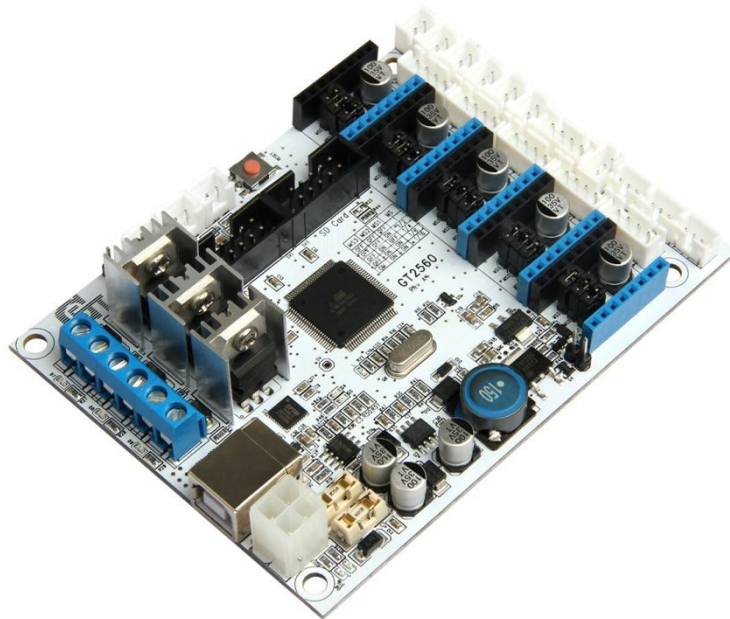

Contents

Copyright Declaration	3
Technical Support	3
1 Introduction	4
1.1 Overview and Hardware Resources.....	6
1.2 Software Resources	8
1.3 Source	8
2 Interfaces	9
2.1 Interface Layout.....	9
2.2 Interface specifications	9
2.3 subdivision of stepper motor.....	10
2.4 Fan connection.....	11
3 Development Environment setting	13
3.1 Interface Connecting and Setting.....	13
3.2 Software setting.....	14
3.3 File Burning.....	18
4 Get Started	21
5 FAQ.....	25

Copyright Declaration

The copyright of this specification belongs to the Shenzhen GETECH CO., LTD. (hereinafter referred to as the "Geetech"), and all rights reserved. No part of this specification should be reproduced or extracted in any forms or means without the prior written consent of Geetech by any company and individuals.

Technical Support

If you are interested in the technology of 3 D printing, flight control and U-home, welcome to Geetech, we have series of made-up products, main boards, modules and a variety of peripherals for you. Or if you are looking for relevant information or technical support, please login our forum where you can find anything you want about open source. To know more about our new products, please visit www.geetech.com, we will serve you wholeheartedly.

1 Introduction

GT2560 is a compact board that is integrated with the mighty function of the Arduino Mega2560+Ultimaker and Arduino Mega2560+ramps 1.4 on respect of both software and hardware and has more premium features: the streamlined interfaces effectively avoid the unnecessary troubles, well-regulated compaction of components highly integrated saves more space and easier to be mounted on most applications.

5 stepper motors, swappable driving modules, mighty ATmega2560 processor with 256k memory, 16MHz operating frequency, high-performance USB serial converter CH340C, all these make the GT2560 an ideal option for a 3D printer control board. What's more, GT2560 can run over 12V to 24V which gives higher torque and higher rotation rate.

Features :

1.Integrated with the mighty function of the Arduino Mega2560+Ultimaker and Arduino Mega2560+ramps 1.4 kit, The GT2560 can not only take full place the them on respect of both software and hardware, but also features compact size, more convenient connection, and more stable.

2. Adopt ATmega2560 as the main control chip, coupled with the high-performance USB serial converter CH340C.

3. The power pack: operating voltage is 12V-24V; double power supply design feeds for heatbed and logical part separately. The current is 15A for heatbed and 10A for other parts.

4. The main circuit adopts SMD fuse tube, the diode added to the power port can provide reverse protection to the whole circuit, in addition, the 5V USB is USB port protected with 500mA Recoverable fuse.

5 . 3 12v fan output and one PWM output for LED or other lighting equipment.

6. 3 55Amp MOSFET (with LED indicator, the actual output is restricted by the PCB board and the connector), all 3 MOSFET are equipped with heat sink to ensure sufficient heat dissipation and stable operation.

7. Support 5 A4988 stepper drivers (3 for X/Y/Z axis, and 2 for extruders); the subdivision of stepper motor can be setup by dial switch, eliminating jumper caps, easier to operate.

8. 3 temperature sensor input (100k thermistor is recommended)

9. Extended LCD and SD card interface support both LCD2004 and LCD 12864, with which you can print without your PC.

10. The firmware is the prevalent Marlin, which is known for stability, usability, and high-performance.

Update log:


1. A 3-pin straight pin is added to connect with 3D touch auto leveling sensor.


2. The USB connector will not provide 5V for the board, if you need to refresh the firmware, please provide external power supply.

3. The power port has been changed from hollow to solid one to provide higher current-carrying capability.

4. The three heater connector has been changed into blue ones: 2-pin RC301 5.0mm 15A

1.1 Overview and Hardware Resources

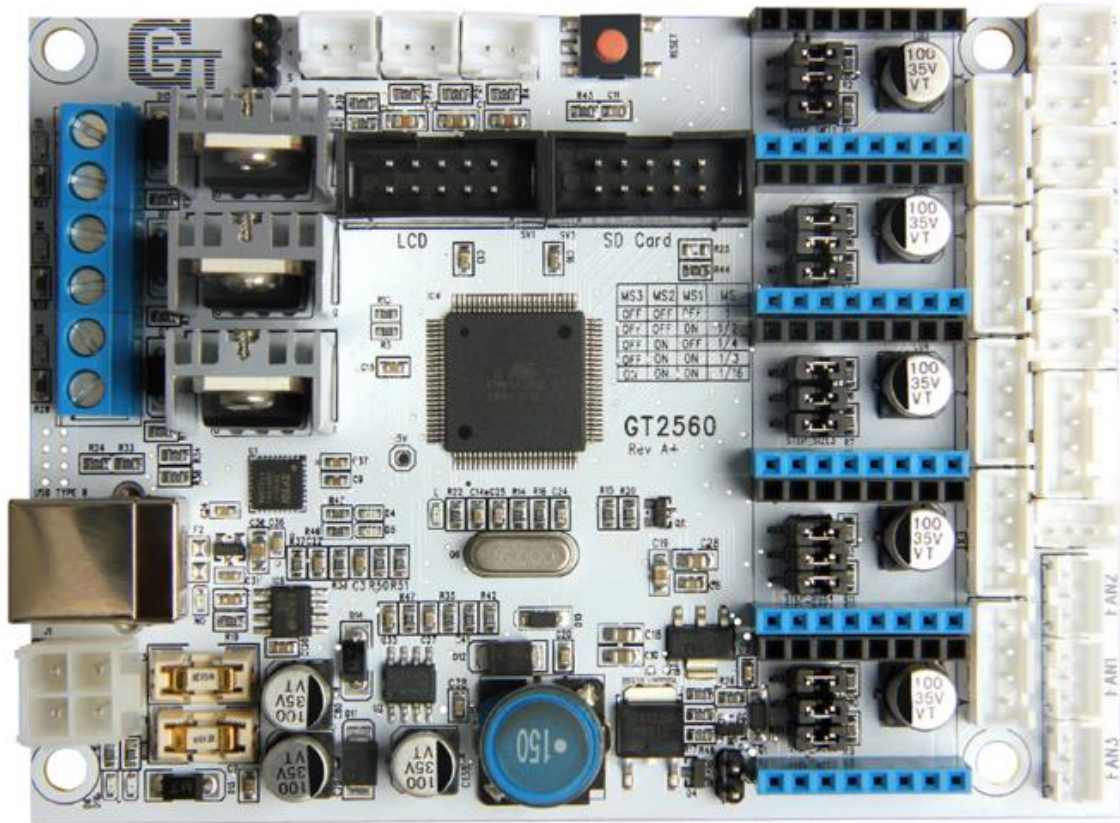

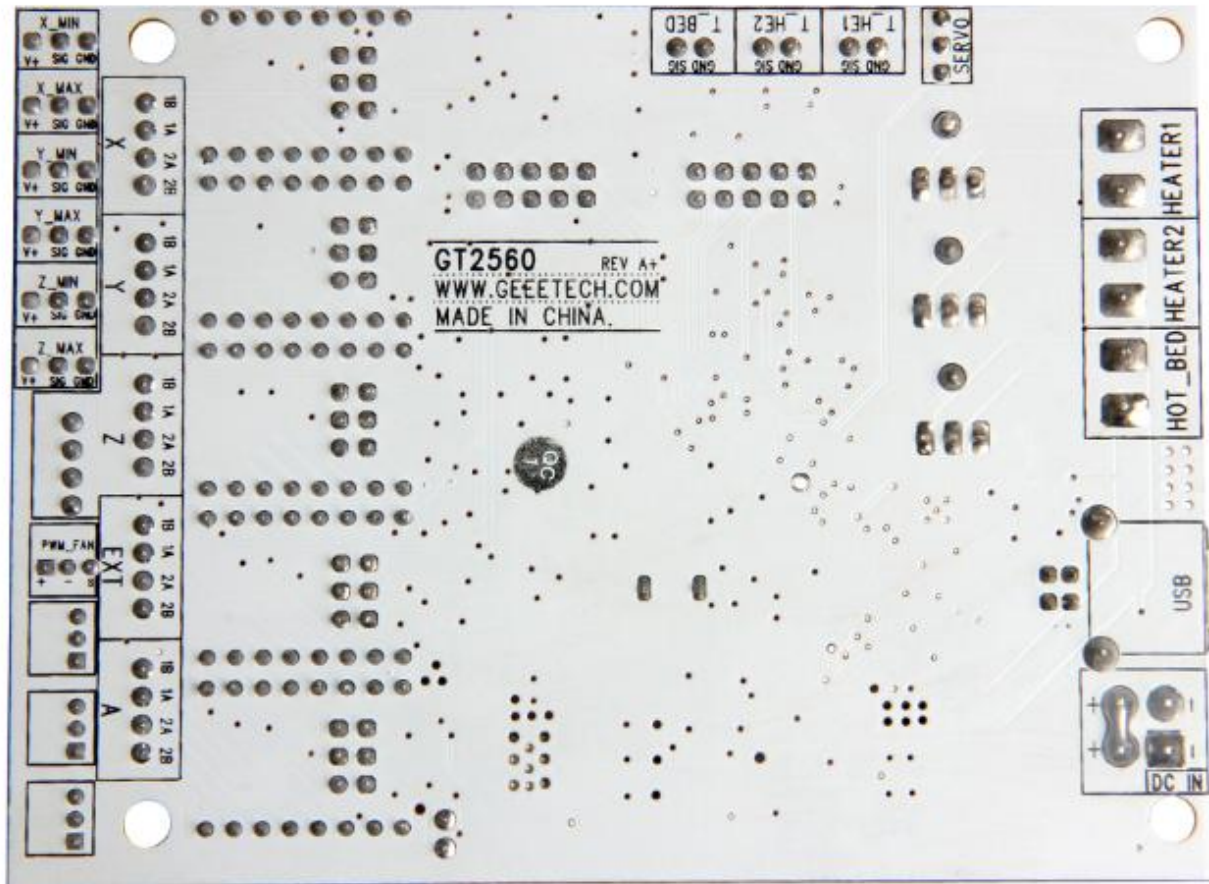

1-1(front and back images)

Hardware resources

12V/24V 15A and 12V/24V 10A power supply

1 power port for heatbed and 2 for extruder

5 stepper motor input, (3 for X/Y/Z axis, and 2 for extruders)

Extended LCD & SD card interface

6 endstop input(X-MIN ,Y-MIN ,Z-MIN 和 X-MAX ,Y-MAX ,Z-MAX)

3 input for thermistor (TEMP1, TEMP2 and TEMP3)

3 input for12V cooling fan

1 PWM output

Dimension: 109mm*80mm*22mm

weight : 87 g

* The specifications of Pin connectors:

Motor: XH (2.54mm-4pin)

Fan: PH (2.00mm-3pin)

Endstop and thermistor: XH (2.54mm-2pin)

1.2 Software Resources

Compiling environment: Arduino IDE

Firmware: Marlin

Host software : [Easy print](#) Repeater-Host

1.3 Source


Arduino IDE : <http://www.geeetech.com/wiki/index.php/Download>

Marlin : http://www.geeetech.com/wiki/images/3/39/Marlin-Marlin_v1.zip

Repetier-Host : http://www.geeetech.com/wiki/images/3/36/SetupRepetierHost_1_00.zip

2 Interfaces

2.1 Interface Layout

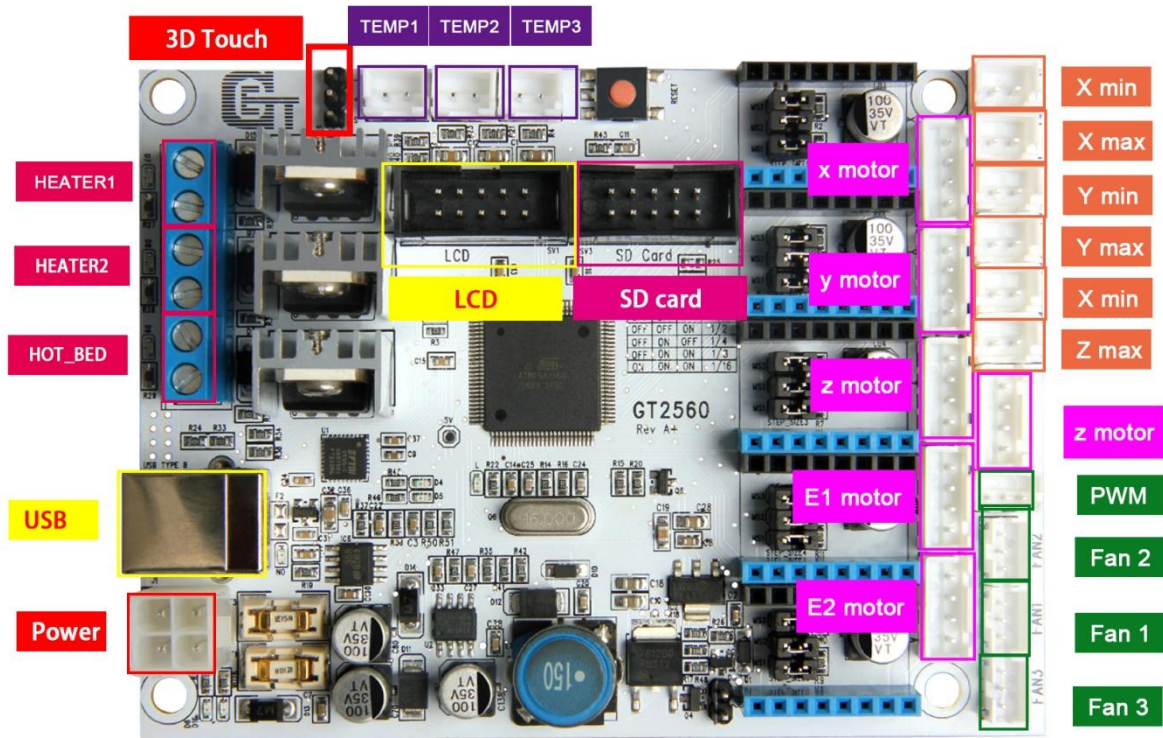

2-1


2.2 Interface specifications

1. DC IN : 12V-24V 15A and 12V-24V 10A
2. HOT_BED: heat bed
3. HEATER1: power supply for extruder 1
4. HEATER2: power supply for extruder 2

5. LCD ENCODER : LCD panel
6. SD Card
7. X_MIN/X_MAX/Y_MIN /Y_MAX /Z_MIN /Z_MAX: 6 end stop input, XH2.54-2Pin
8. TEMP1: temperature sensor for extruder 1, XH2.54-2Pin
9. TEMP2: temperature sensor for extruder 2, XH2.54-2Pin
10. TEMP3: temperature sensor for heatbed, XH2.54-2Pin
11. X,Y,Z : Stepper motors for X, Y, Z axis, XH2.54-4Pin
12. EXT1, EXT2(A) : Stepper motors for extruder 1 and extruder 2, XH2.54-4Pin
13. FAN1 , FAN2 , FAN3 : 3 12V cooling fans, PH2.0-3Pin
- 14.1 PWM: PWM output for cooling fan, FAN: PH2.0-3Pin

2.3 subdivision of stepper motor

Use jumper caps to subdivide stepper motor. When jumper cap is plugged, it is ON.

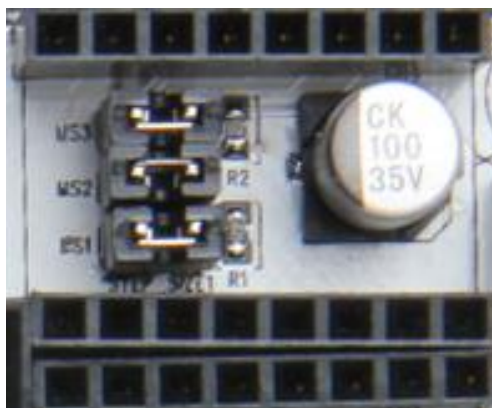

2-2

1. Subdivision on the base of A4988 stepper driving module:


Turn ON/OFF			Subdivision
MS1	MS2	MS3	
OFF	OFF	OFF	full step
ON	OFF	OFF	1/2 step
OFF	ON	OFF	1/4 step
ON	ON	OFF	1/ 8 step
ON	ON	ON	1/16 step

2. Subdivision on the base of Drv8825 stepper driving module:

Turn	ON/OFF		Subdivision
MS1	MS2	MS3	
OFF	OFF	OFF	full step
ON	OFF	OFF	1/2 step
OFF	ON	OFF	1/4 step
ON	ON	OFF	1/ 8 step
OFF	OFF	ON	1/16 step
ON	OFF	ON	1/32 step
OFF	ON	ON	1/32 step
ON	ON	ON	1/32 step

2.4 Fan connection


As default, no matter the power supply is 12V or 24V; you need to connect the 12V fan as there is a separate chip that can provide power supply for the fan. If you choose the 24V fan and 24V power supply, you need to connect the JP2 with jumper cap. As shown in the picture.

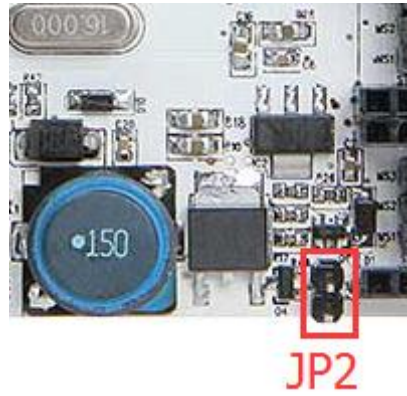

Note: this function is only available for versions after REV A.

3 Development Environment setting

3.1 Interface Connecting and Setting

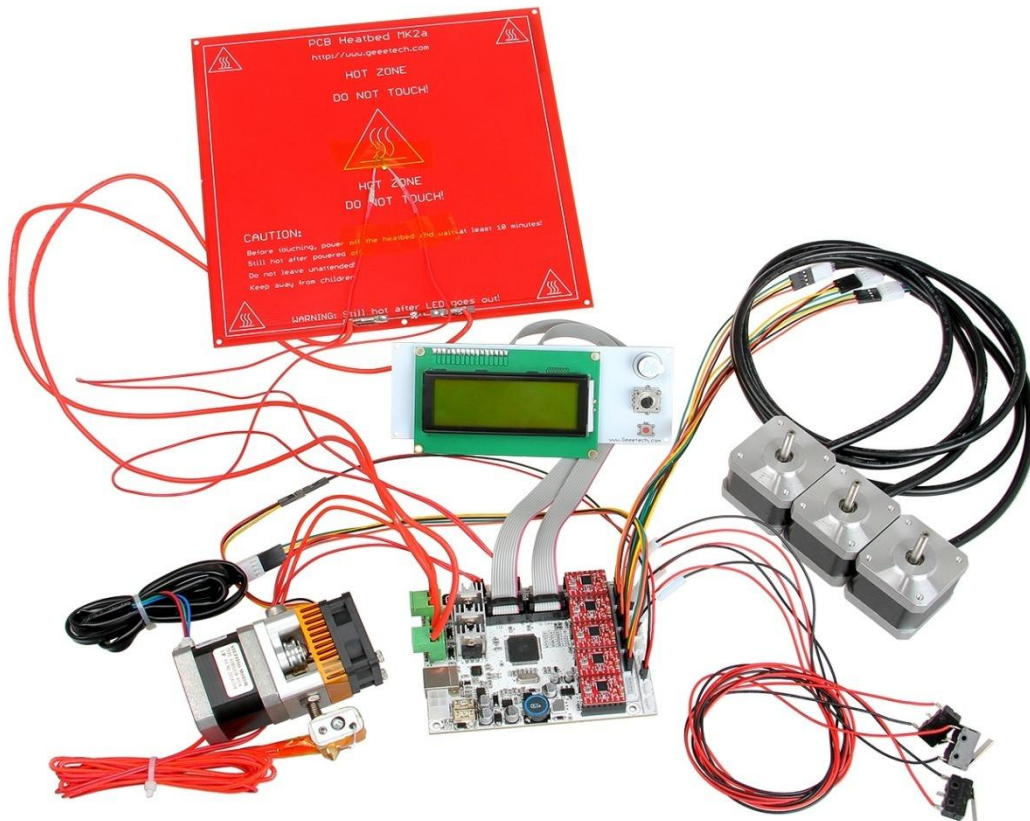


3-1

Note:


Pay attention to the Plus-n-Minus of the power connector, reverse connection can cause irrevocably damages.

A4988 should also be connected to the right port, mismatches and reversed directions can cause damage to the main board. You can the correct connections are as follow:

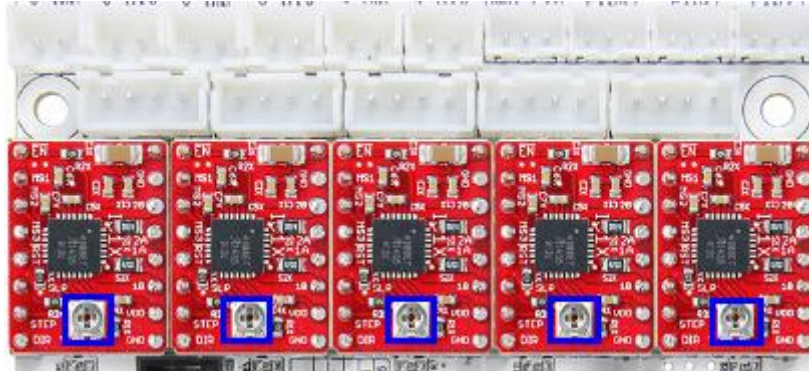

3-2

If you are using DRV8825 instead of A4988, The correct connections are as follow:

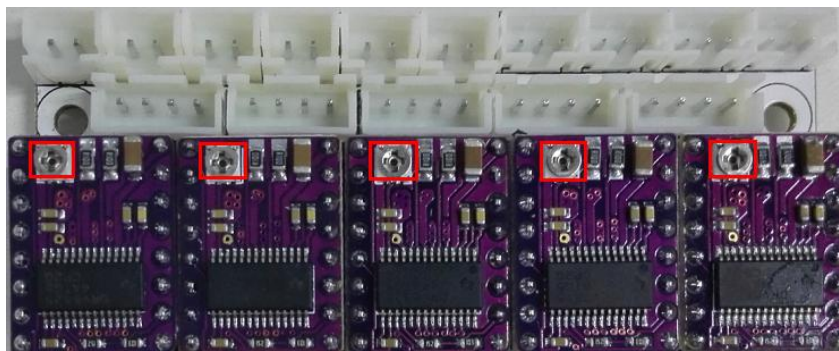

3-3

3. You are suggested to connect all the Periphery modules before testing.


3.2 Software setting

CH340C Driving Installation:


Connect the printer to computer with USB cable. The motherboard driver installer will automatically appear. Please check the following steps.

1. When you connect your printer to computer with a USB cable. The following dialog box will


appear.

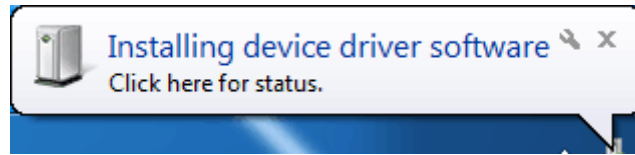

2. In the Arduino IDE when the CH340C is connected you will see a COM Port in [Device manager]. The COM number for your device may vary depending on your system.

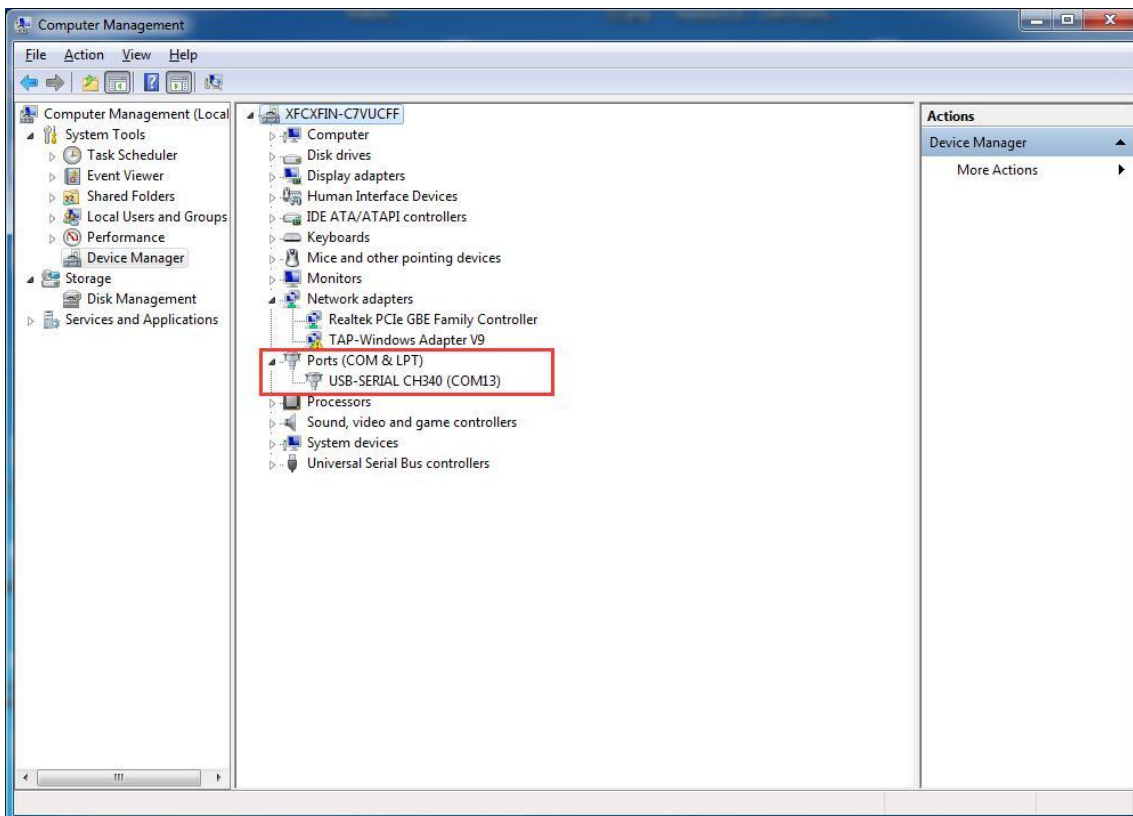


3. After successful installation, a pop-up box will appear as follows.

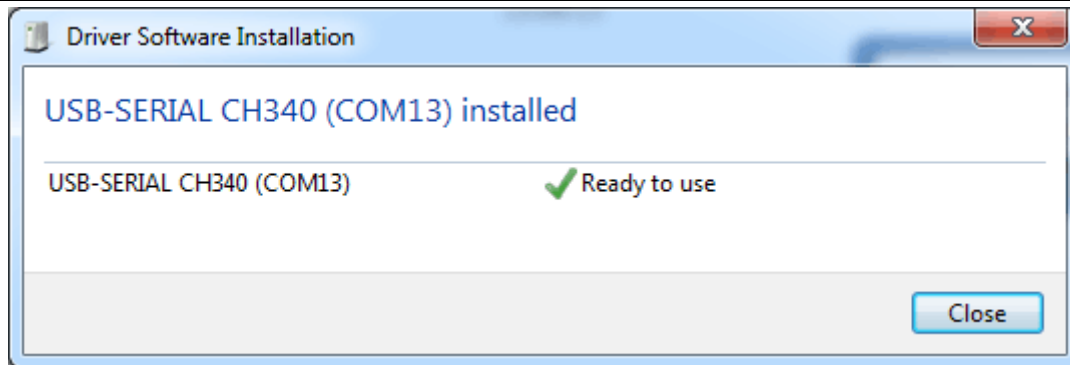


Note: If the driver fails to install automatically, you can finish the installation job manually. Here are the detailed steps.


1. Download CH340C here, which is the driver of GT2560:
http://www.wch.cn/download/CH341SER_EXE.html (Windows OS)
http://www.wch.cn/download/CH341SER_MAC_ZIP.html (MAC OS)
http://www.wch.cn/download/CH341SER_LINUX_ZIP.html (LINUX OS)
2. Unzip the file.
3. Run the installer which you unzipped.
4. In the Arduino IDE when the CH340C is connected you will see a COM Port in [Device manager]. The COM number for your device may vary depending on your system.

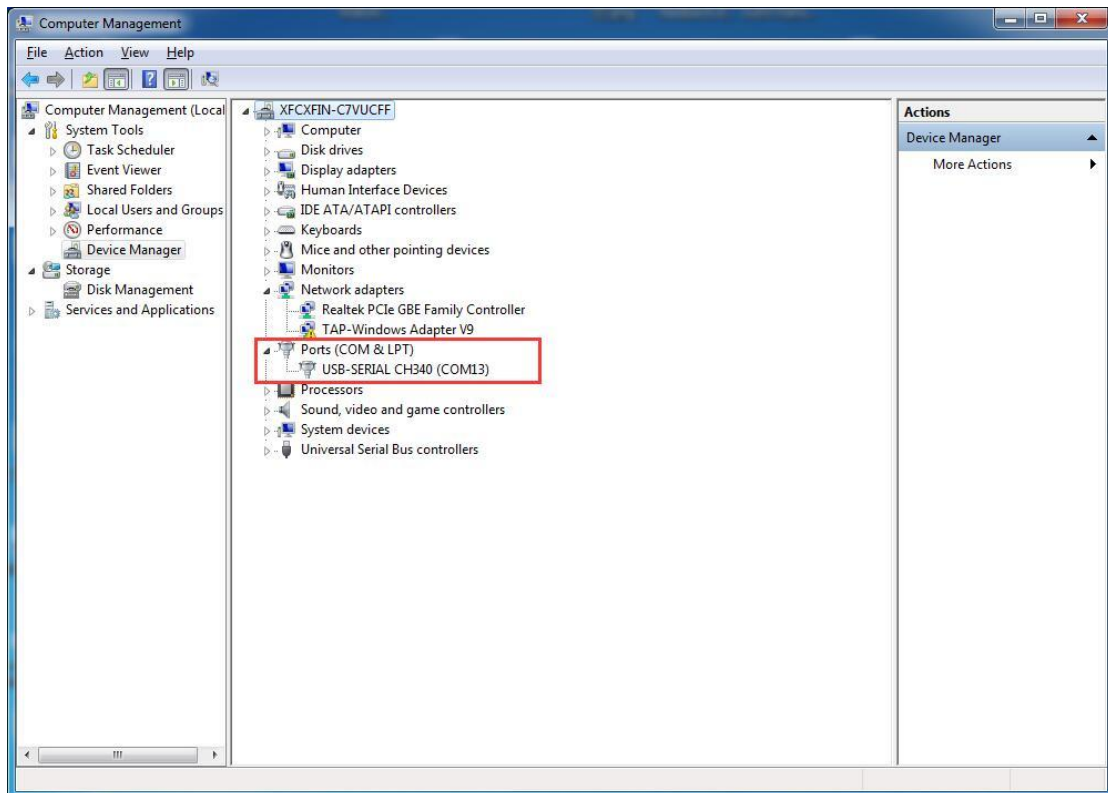

5. Click [Install] to continue.

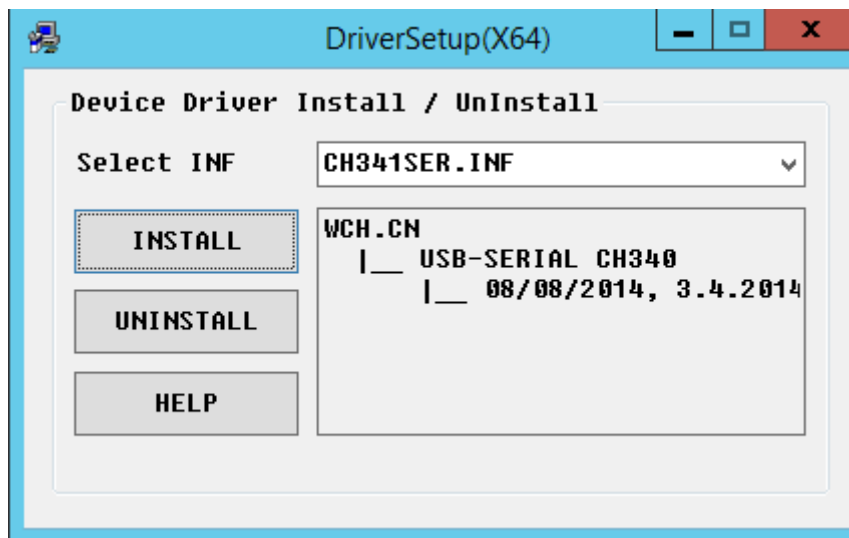


6. After successful installation, a pop-up box will appear.

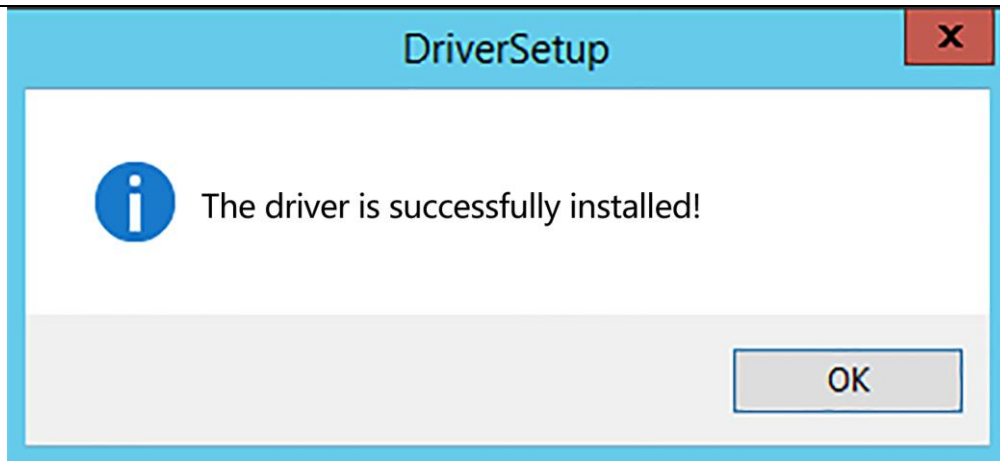

3.3 File Burning


Windows users need install driver before uploading. The board: Tools > Board > Arduino Mega 2560 or Mega ADK, as shown below.

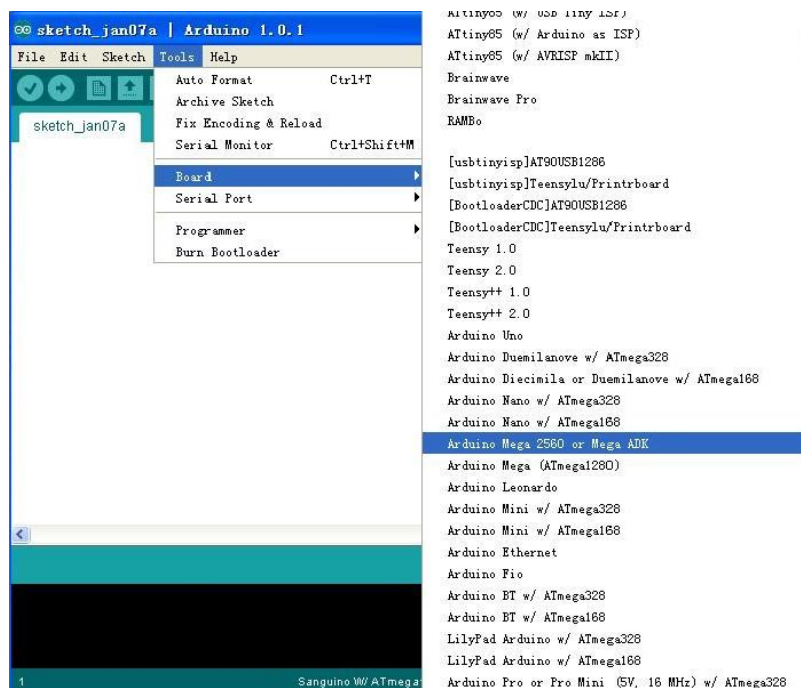



3-10

Configuring serial interface: Tools > Serial Port > the corresponding COM Port of GT2560 usually

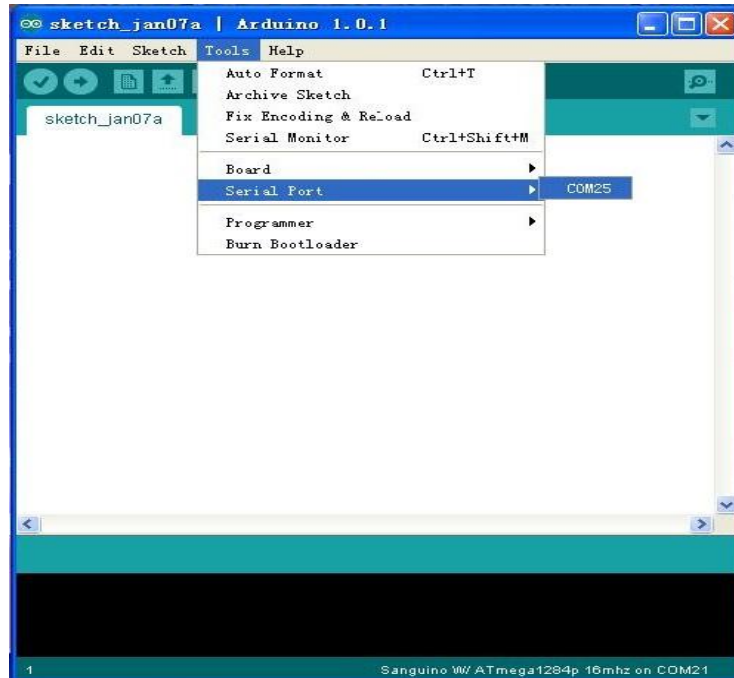the last one. As shown below



3-11

Load in the file you need to burn, Click the “check ()” button to check if it is right and then click the “  ” button to upload firmware, as shown below.



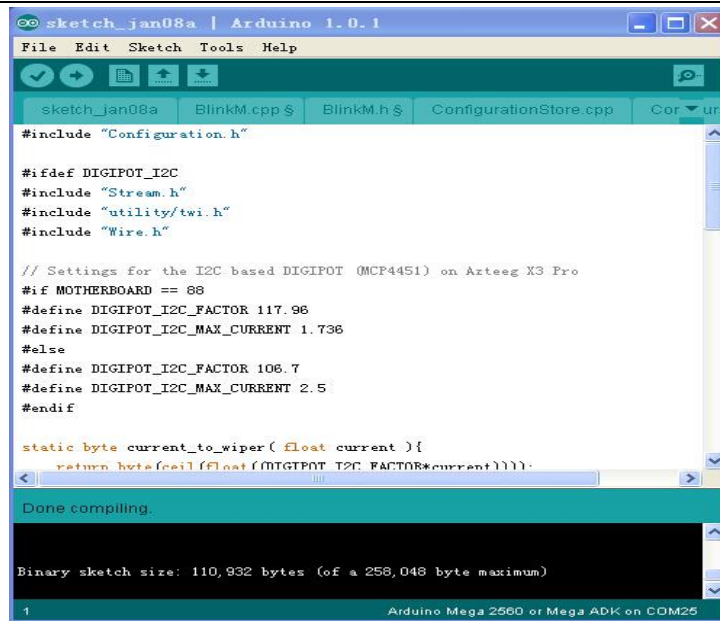


图 3-12

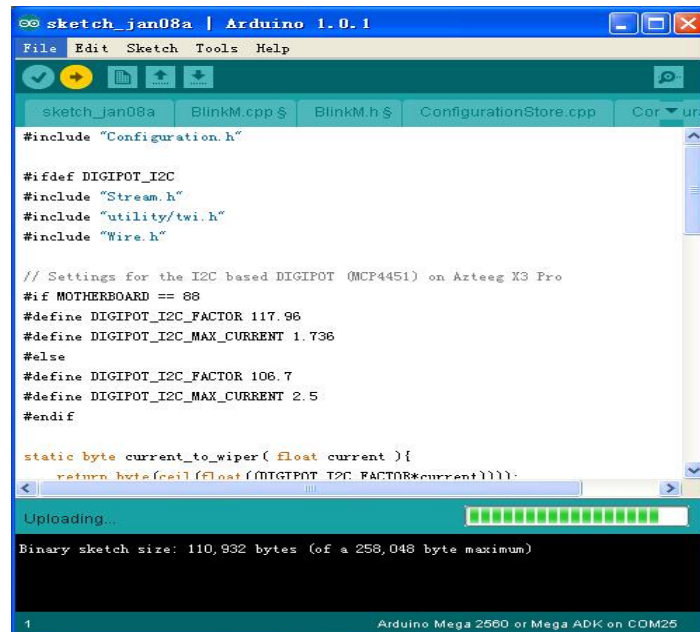

3-13

Upon uploading, the LED indicator corresponding to the TX, RX and L on the GT2560 will blink, if they stop blinking, it means the file has been uploaded successfully.

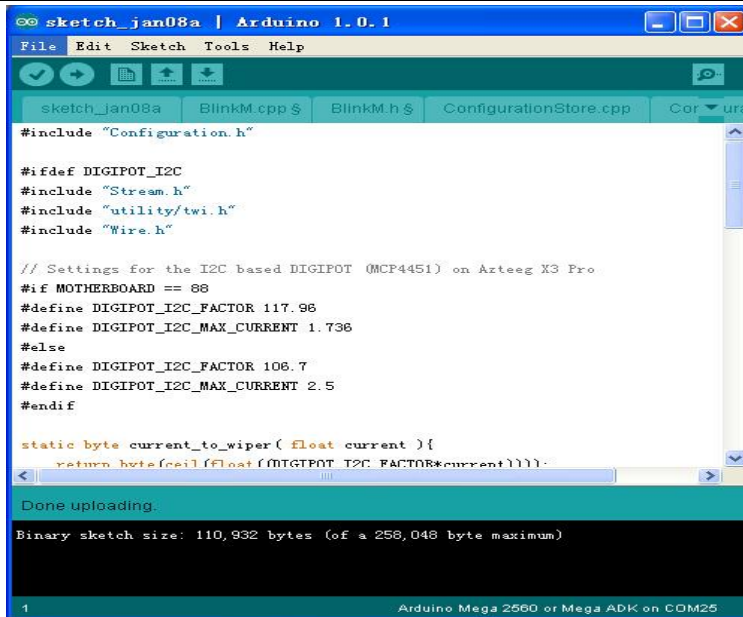

```
sketch_jan08a | Arduino 1.0.1
File Edit Sketch Tools Help
sketch_jan08a BlinkM.cpp $ BlinkM.h $ ConfigurationStore.cpp Cor...ura
#include "Configuration.h"

#ifdef DIGIPOT_I2C
#include "Stream.h"
#include "utility/twi.h"
#include "Wire.h"

// Settings for the I2C based DIGIPOT (MCP4451) on Azteeg X3 Pro
#if MOTHERBOARD == 88
#define DIGIPOT_I2C_FACTOR 117.98
#define DIGIPOT_I2C_MAX_CURRENT 1.736
#else
#define DIGIPOT_I2C_FACTOR 106.7
#define DIGIPOT_I2C_MAX_CURRENT 2.5
#endif

static byte current_to_wiper( float current ){
    return byte(ceil(float(DIGIPOT_I2C_FACTOR*current)));
}

Done uploading.
Binary sketch size: 110,932 bytes (of a 258,048 byte maximum)
1 Arduino Mega 2560 or Mega ADK on COM25
```

3-14

After uploading, you can go on to the next step. If you cannot upload, check the dialog box below to identify the problem and solve it. The common mistakes are the wrong select of type of board or serial port etc.

4 Get Started

GT2560 is the CPU of a 3D printer, manipulating the whole process of printing. GT2560 can't be put in use directly without uploading firmware.

1. Firmware uploading- marlin.
2. Setting parameters of the firmware

The parameters that need setting are as below, for those not mentioned just leave them as default.

```
#define BAUDRATE 250000
```

This parameter is for the baud rate of serial port. Note: a successful communication can be realized

only when the Baud rate of upper computer is identical with that of Firmware. The Baud rate is not set in random. The common Baud rate are: 2400, 9600, 19200, 38400, 57600, 115200, 250000. The last three are frequently used for 3D Printer.

```
#define MOTHERBOARD 7
```

This parameter is set for board type. 3D Printer has many types of main board, and the settings of IOs are different, therefore, the parameter has to correspond to the type of your board, or it can't operate normally. The parameter of GT2560 should be 7(single- nozzle). For other board, you can refer to the annotation on the board.

```
#define TEMP_SENSOR_0 1
```

```
#define TEMP_SENSOR_BED 1
```

The two parameters are set for the type of temperature sensor respectively. They are the critical parameter to check if the sensor read temperature correctly. The printer can't operate normally, even has potential risk (damage the device and even worse). You must modify depending on the temperature sensor you use.

```
#define EXTRUDE_MINTEMP 170
```

This parameter is set to avoid potential risks when the extruder operates before reaching the rated temperature. If you use other 3D Printer, such as printer to make Chocolates, 45°C is appropriate, so that the parameter configured to a lower value(such as 40°C).

```
const bool X_ENDSTOPS_INVERTING = true;
```

```
const bool Y_ENDSTOPS_INVERTING = true;  
const bool Z_ENDSTOPS_INVERTING = true.
```

The three parameters are set for the end stops of three axes. If the configuration is true, the end stop outputs 1 in default condition, and outputs 0 when triggered. That is to say, mechanical end stop should connect to the NO (normally open) contactor. If it is connected to the NC (normally closed), true should be changed to false.

```
#define INVERT_X_DIR false  
#define INVERT_Y_DIR true
```

Mistakes are often made in the above two parameters. The parameters are different for different machinery. In principle, the origin should be at lower-left corner of the print platform (origin: [0, 0]), or at up-right corner (origin: [max, max]). Only in this way will the printing be correct, otherwise, the printing is the mirror image of one axis which is not what expected.

```
#define X_HOME_DIR -1  
#define Y_HOME_DIR -1  
#define Z_HOME_DIR -1
```

If the position of the origin is the minimum, the parameter is -1; if it is the maximum, the parameter is 1.

```
#define X_MAX_POS 205  
#define X_MIN_POS 0  
#define Y_MAX_POS 205
```

```
#define Y_MIN_POS 0  
#define Z_MAX_POS 200  
#define Z_MIN_POS 0
```

These parameters are crucial to the printing size. Fill in parameters by reference to the coordinate graphs. It is important to note that the origin is not the printing center and the real printing center usually lies at $[(x.max - x.min)/2, (y.max - y.min)/2]$. The coordinate of central will be used in the slice tool. The printing center's coordinate must correspond to the parameter configuration, or it will print to the outside of the platform.

```
#define HOMING_FEEDRATE {50*60, 50*60, 4*60, 0}
```

The parameter means the homing speeds (mm/min). This parameter can be set as default if you use the x-axis and y-axis adopt synchronous belt drive and z-axis adopts screw drive.

```
#define DEFAULT_AXIS_STEPS_PER_UNIT {85.3333, 85.3333, 2560, 158.8308}
```

These parameters are crucial to the printing size. These parameters indicate the pulse the axis need when operating 1mm. they are corresponding to x, y, z axis and extruder respectively. In most cases these figure should be calculated by yourself, you can refer to:

<http://calculator.josefprusa.cz/#steppers>.

So far, the commonest parameters have been configured and the printer can work now. In addition, if the 2004 LCD needs verifying, you should delete the “//” from “//#define REPRAP_DISCOUNT_SMART_CONTROLLER” to ensure the normal working.

5 FAQ

1. How many extruders can GT2560 support?

At most 2 extruders, GT2560 supports 5 A4988 stepper motor drivers, they are X/Y/Z axis and 2 extruders.

2. What is the power required?

You need to use the 12V-24V power supply, and if you are using the single extruder one, the total power is no less than 200W, if you are using the dual extruder one, the total power is no less than 240W.

3. The stepper motor on for the extruder doesn't turn?

By default in the firmware, only when the temperature of the extruder reaches 170 °C can the motor turn.