



Settings for Alkaid

In order to better use Alkaid LCD Resin 3D Printer, we specially prepared a configuration file for you, you only need to import the configuration file directly into the CHITUBOX slicing software. You can change the settings if necessary.


1. Click "Settings"

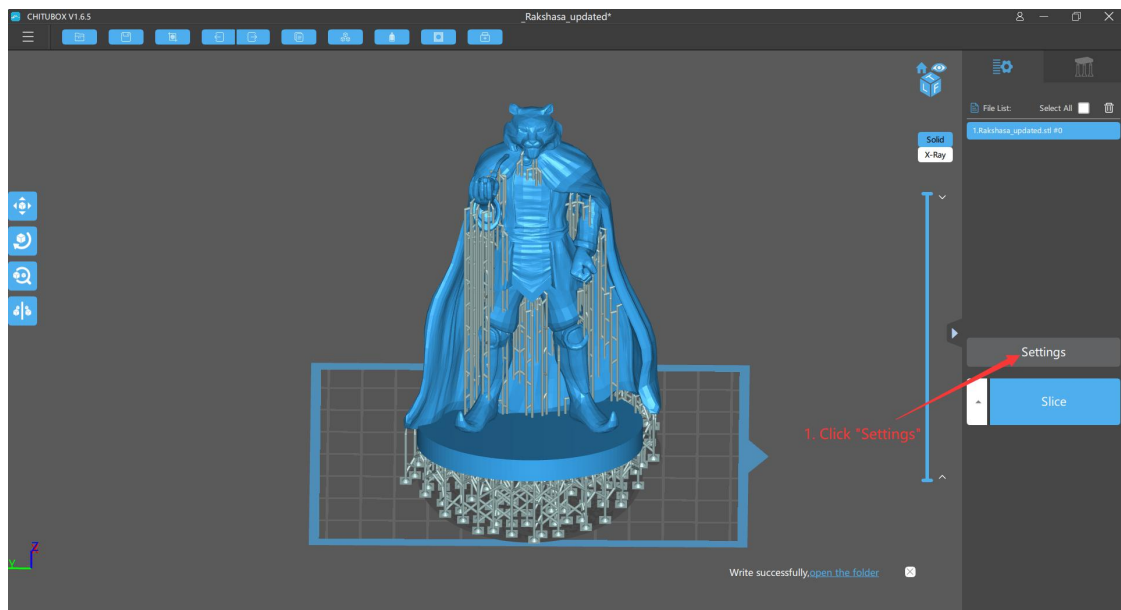

2. Click "Import profile" icon

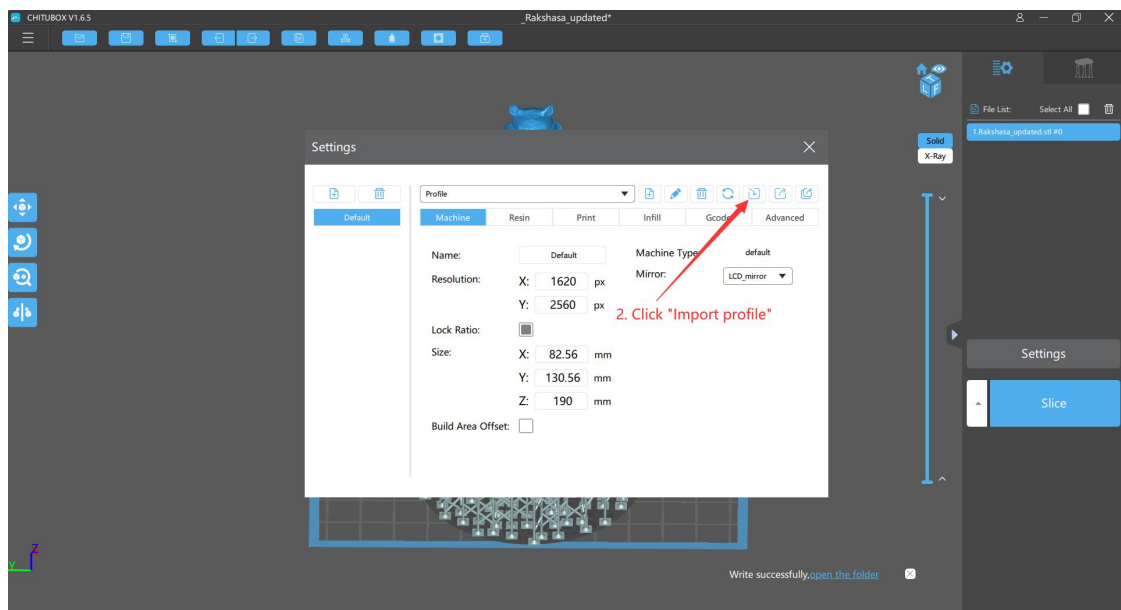

3. Open the "Alkaid_Default_Profile_profile.cfg" file

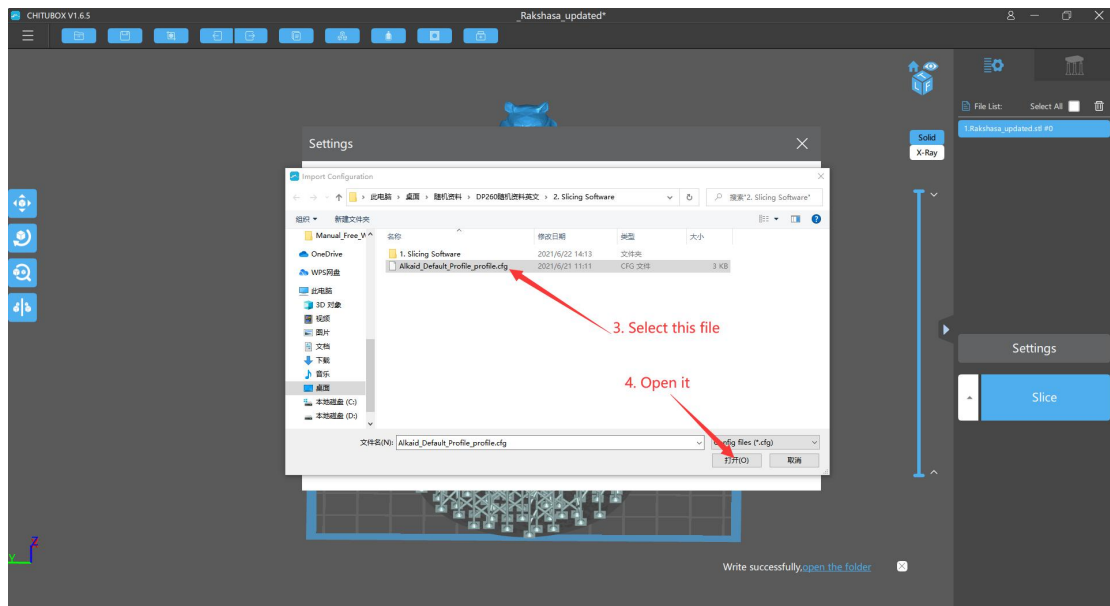

4. Check the profile name, complete the setting

