

User Manual

Content

content.....	1
1. software introduction.....	3
1.1 MSLA resin 3D printer.....	3
1.2 DLP resin 3D printer.....	3
1.3 SLA resin 3D printer.....	4
2. software installing.....	4
2.1 software download.....	4
2.2 Software installation.....	5
3. User login.....	7
4. Software operation.....	7
4.1 Main Menu.....	8
4.1.1 Open project.....	8
4.1.2 Save project.....	8
4.1.3 Open.....	8
4.1.4 Save as.....	8
4.1.5 Open Recent.....	8
4.1.6 Account.....	8
4.1.7 Language.....	8
4.1.8 Help.....	8
4.1.9 Examples.....	8
4.1.10 Quit.....	8
4.2 Introduction of menu.....	8
4.2.1 Open file.....	8
4.2.2 Save file.....	8
4.2.3 Screenshots / Recording.....	8
4.2.4 Undo & Redo.....	9
4.2.5 Clone Current Model.....	9
4.2.6 Auto layout.....	9
4.2.7 Hollow.....	9
4.2.8 Dig hole.....	10
4.3 Model Editing.....	10
4.3.1 Move.....	10
4.3.2 Rotation.....	11

4.3.3	Zoom.....	11
4.3.4	Mirror.....	11
4.4	Mouse operation.....	12
4.4.1	Left click.....	12
4.4.2	Left key press.....	12
4.4.3	Right key press.....	12
4.4.4	Mouse scroll pulley.....	12
4.5	Views.....	12
4.5.1	M o v e	13
4.5.2	Rotate.....	13
4.5.3	Scale.....	13
4.5.4	Front view/home.....	13
4.5.5	Othographic/Perspective.....	13
4.5.6	Top/Left/Front.....	13
4.5.7	Solid/X-Ray.....	13
4.5.8	Model preview.....	13
4.5.9	Expand/Hide.....	13
4.6	Common settings.....	14
4.6.1	File list.....	14
4.6.2	Slice settings.....	14
4.6.3	Slice.....	19
4.6.4	Slice Preview.....	19
4.7	Support setting.....	20
4.7.1	Lift height.....	21
4.7.2	Support setting.....	21
4.7.3	Automatic support.....	21
4.7.4	Add support.....	21
4.7.5	Delete support.....	21
4.7.6	Edite support.....	21
4.7.7	Remove all.....	21
4.8	Printing process.....	22
4.8.1	choose printer.....	22
4.8.2	Slice.....	23
4.8.3	Preview and export.....	23

1. Software Introduction

1 1


:

:


- AnyCubic Photon
- AnyCubic Photon s
- CREALITY LD-002R
- CREALITY LD-002H
- ELEGOO MARS
- ELEGOO MARS C
- ELEGOO MARS Pro
- ELEGOO MARS 2 Pro
- ELEGOO SATURN
- EPAX X1
- EPAX X10 2Kcolor
- EPAX X133 4Kmono
- EPAX X156 4Kcolor
- Flashforge Explorer Max
- Longer3D Orange10
- Longer3D Orange30
- Peopoly Phenom
- Peopoly Phenom L
- Peopoly Phenom Noir
- Orbeat D100
- Phrozen Shuffle
- Phrozen Shuffle Lite
- Phrozen Shuffle XL
- Phrozen Shuffle XL Lite
- Phrozen Shuffle 4K
- Phrozen Sonic
- Phrozen Sonic Mini
- Phrozen Transform
- QIDI Shadow5.5
- QIDI Shadow5.5s
- QIDI Shadow6.0 Pro
- SparkMaker Original
- SparkMaker FHD
- Voxelab Polaris
- WanHao D7
- WanHao D8
- Zortrax Inkspire

- Others

1 2 3 :

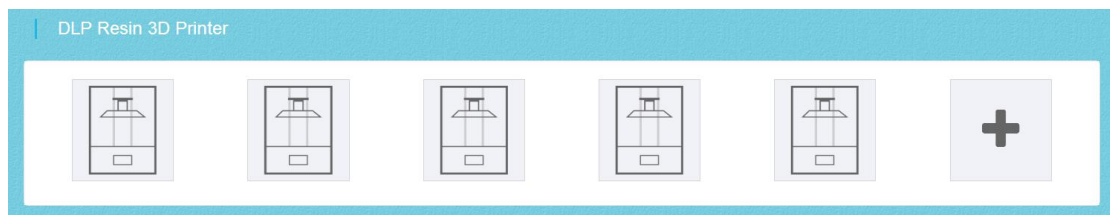


1 3 3 :

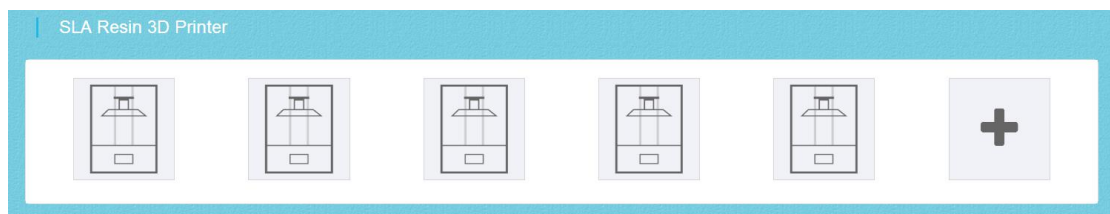


2. Software installing

2 1

A: Open the browser and input this website: : www.cbd-3d.com reach PRODUCTS-> CHITUBOX then turn to www.chitubox.com/

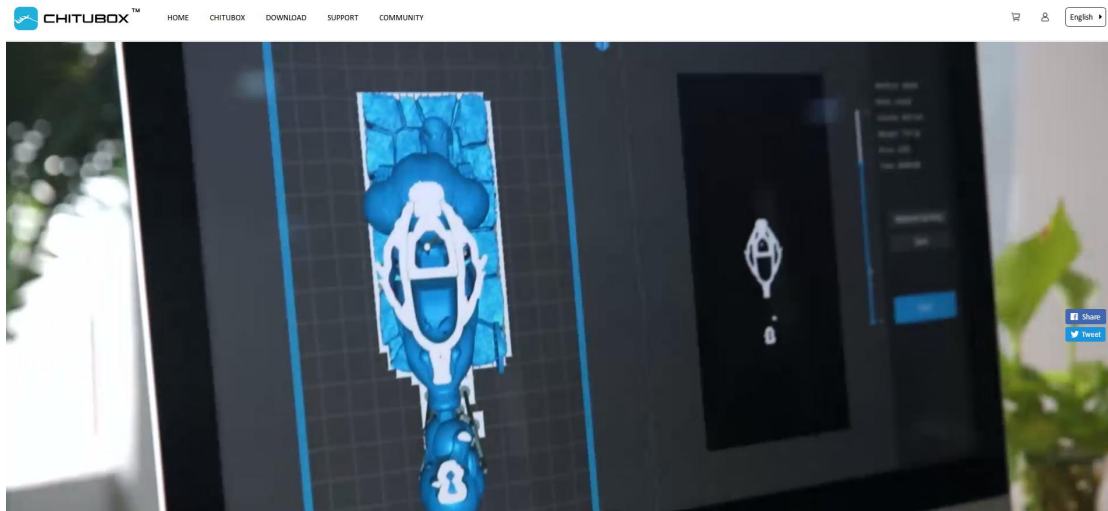

B: Download on the official website: <http://www.chitubox.com>

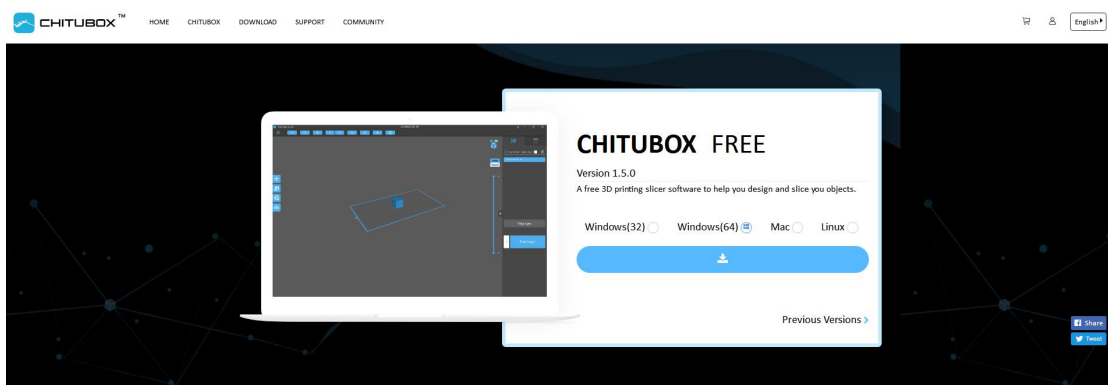

Technical Specifications

Language Translations

Easily switch between any of the following languages...



- English
- French
- German
- Italian
- Japanese
- Spanish
- Portuguese
- Turkish
- Greek
- Russian
- Simplified Chinese
- Traditional Chinese
- Korean

Supported File Formats


3D Models: stl, obj
Slicing: cbbdfg, photon, photons, zip, stl, wox, fhd
format: cwn(by plugin)
Project: chitubox
Profile: cty

2 2

(1) Register the email to log in and download, open the downloaded installation package, and follow the prompts to complete the installation (register the email login, select the version compatible with your computer for Windows (32), Windows (64), Mac, Linux

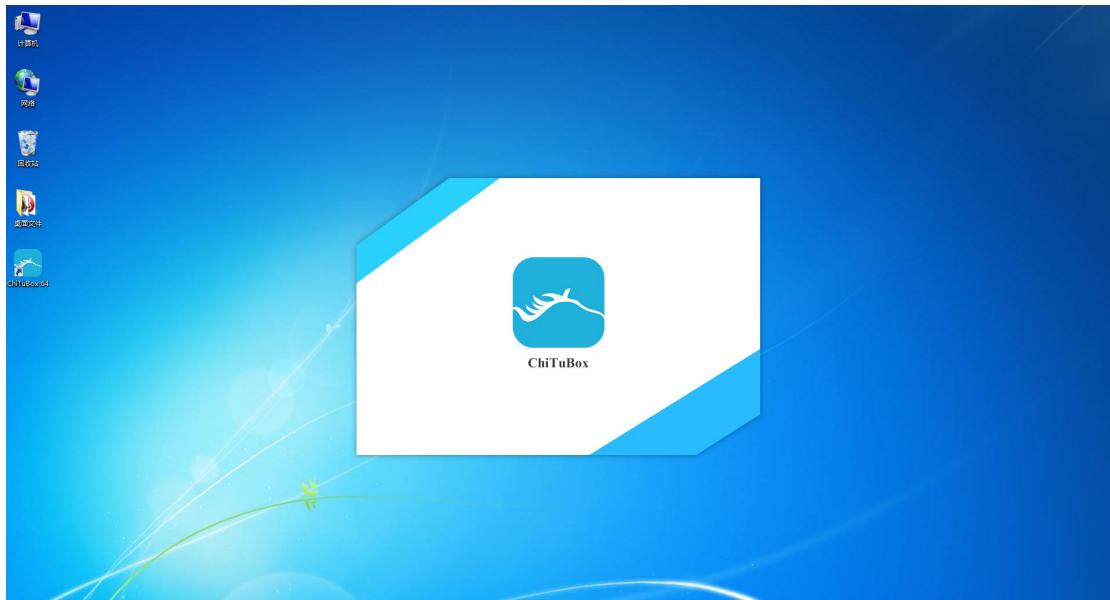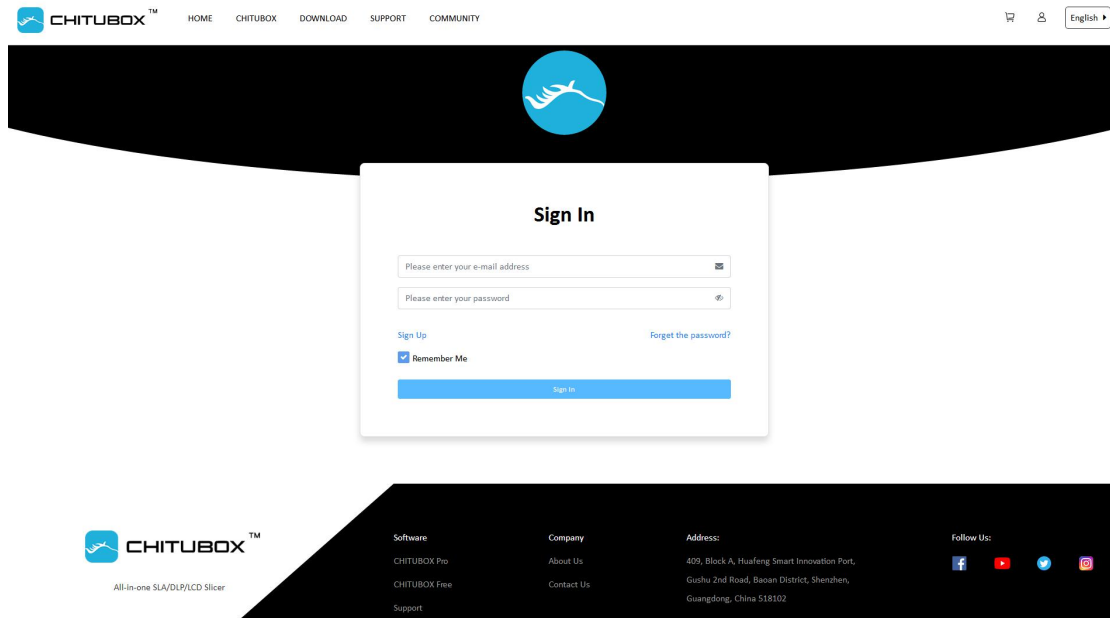


(2) Start the software using the desktop icon or the shortcut in the start menu. When opening the software for the first time, the machine selection box will pop up, and you can choose the machine you want.

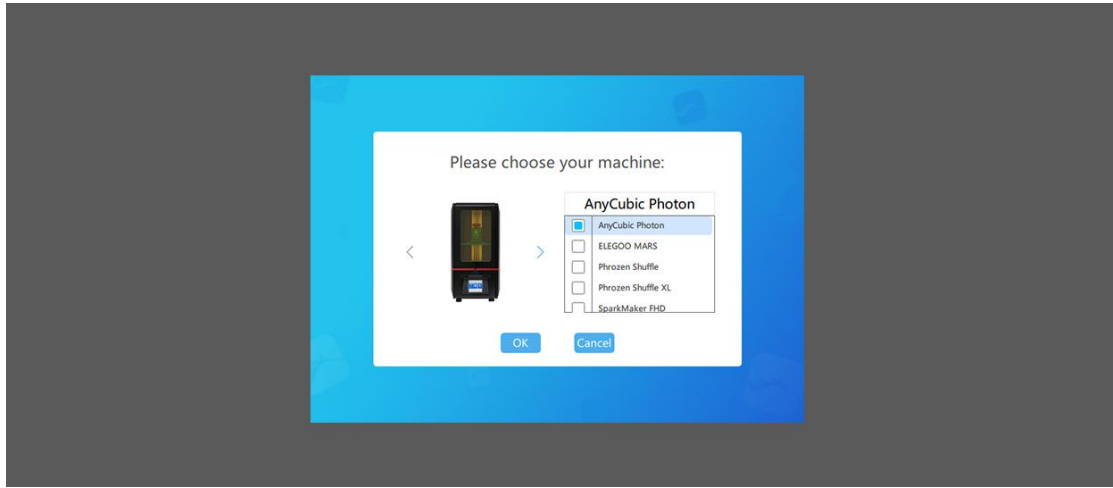


3. User login


-

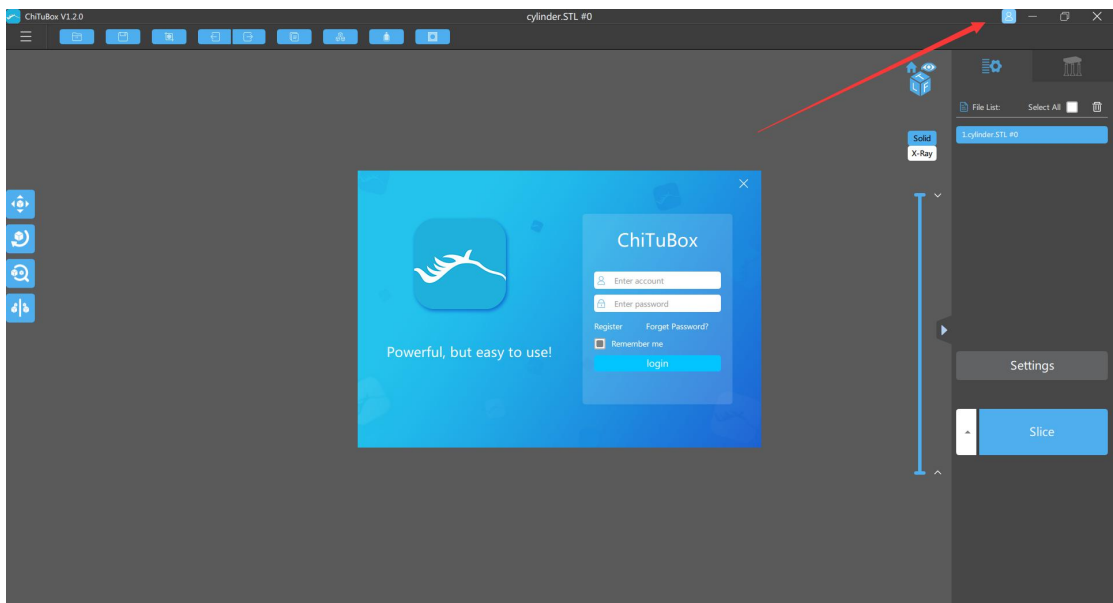

4. Software operation

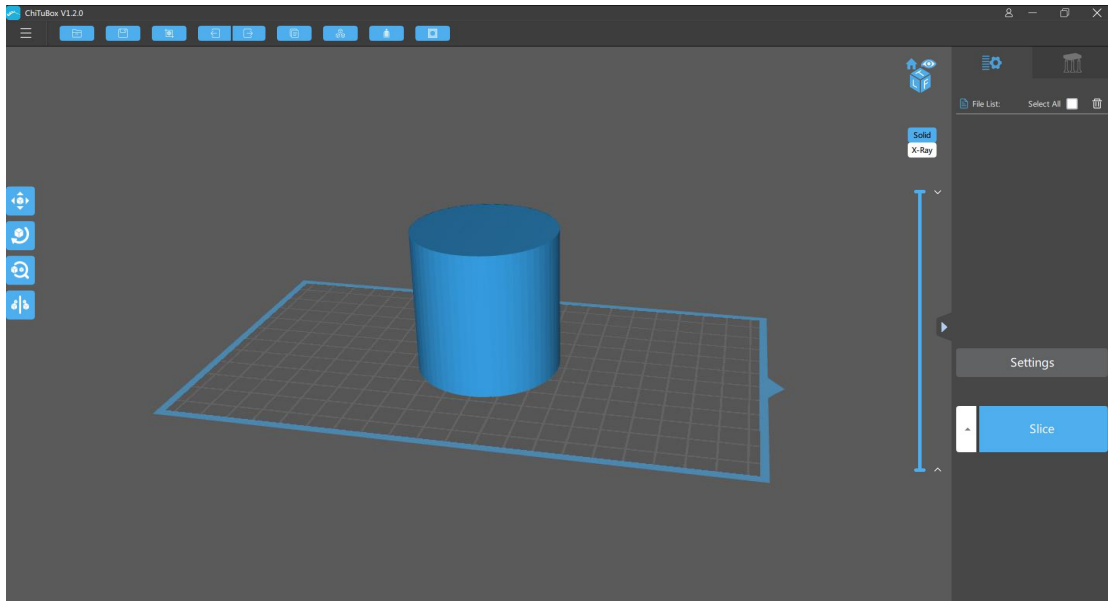


4 1

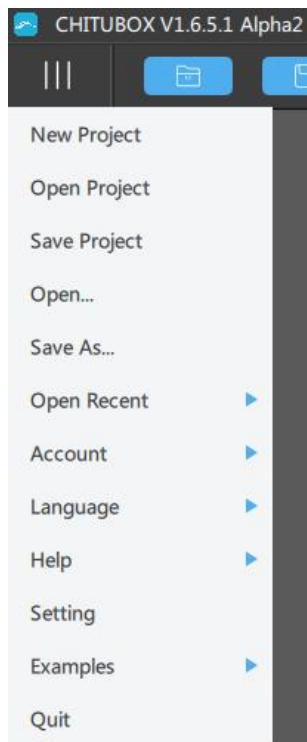

4 1 1 :
4 1 2 :
4 1 3 :
4 1 4 :
4 1 5 :
4 1 6 :
4 1 7 :
4 1 8 :

4 1 9

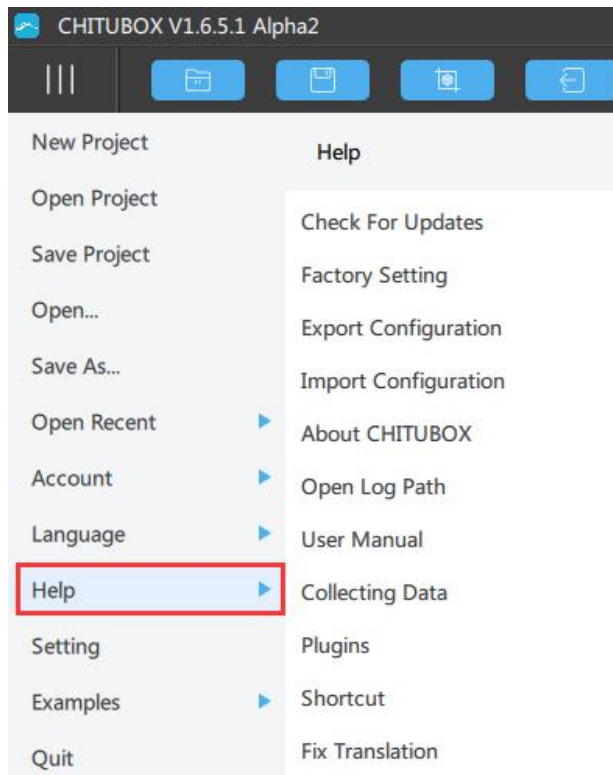


4 1 10

4 1 11 :

4 1 10 :


4.2 Introduction of Menu



4.2.1  **Open file:** load into one or multiple files.

4.2.2  **Save file:** Save the current file

4.2.3  **Screen capture/recording:** Watermark, recording and Capture

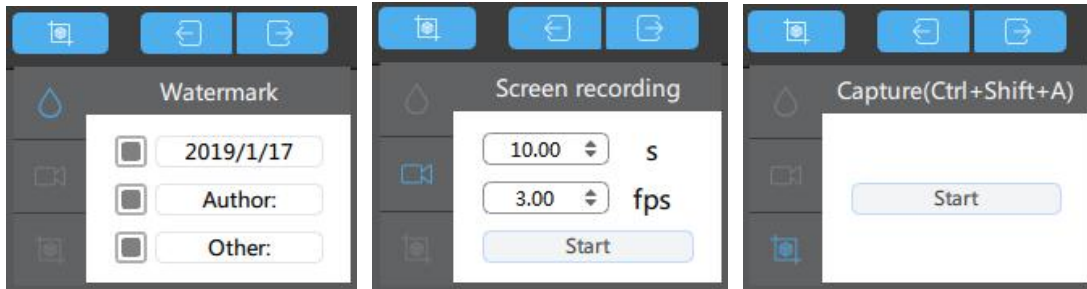

(1) Watermark: Add watermarking information to the picture (date, author, etc.)


(2) Screen recording: You can set time (/ s), frame rate (/ fps),


(3) Capture: Click the “Start” button


4.2.4  Undo & Redo


4.2.5  Clone the current model


4.2.6  Auto layout:

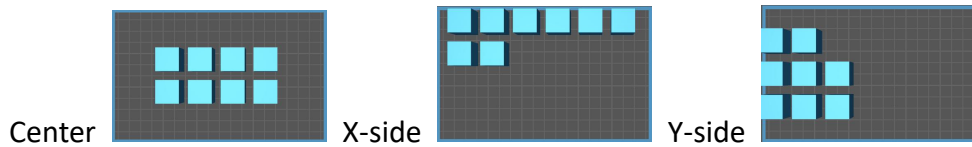

4.2.7  **Hollow:** inter or outer hollow, can set wall thickness and precision.

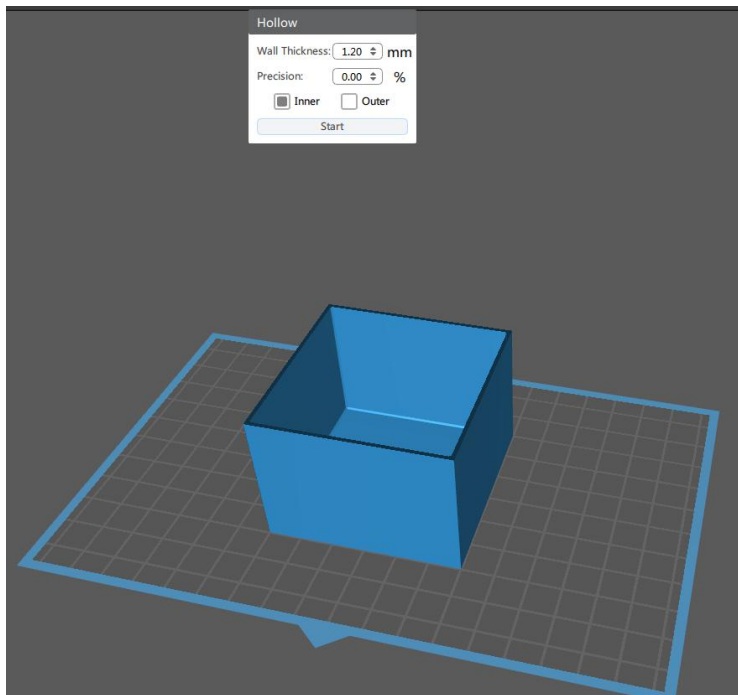


4.2.8  **Dig Hole:** Shape and size can be seted, keep the hole, add a hole.

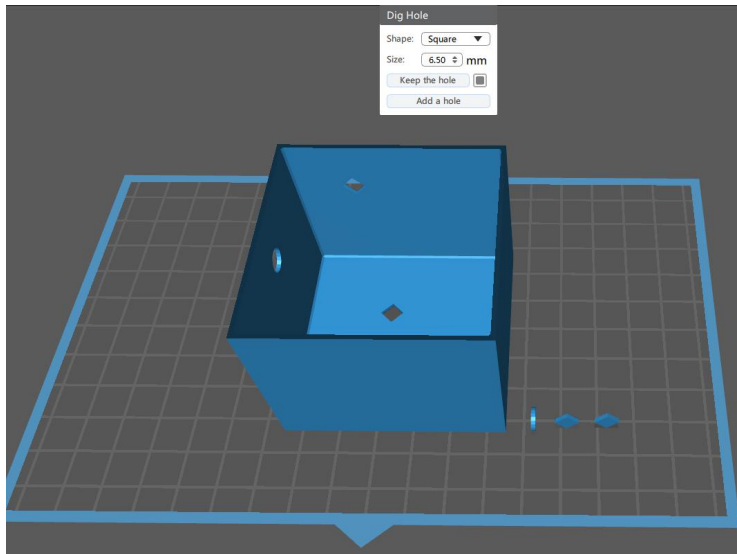

4.3 Model Edition


4.3.1 Move

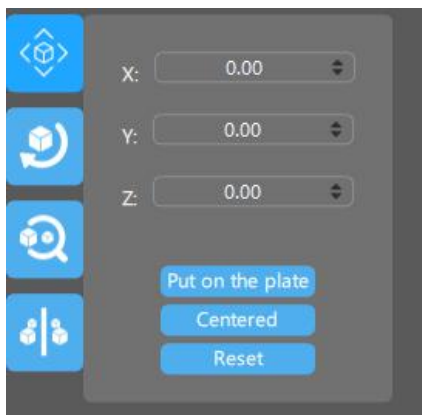

(1) Move X,Y and Z axes respectively: Scroll the mouse or enter data directly.

(2) The model can be placed directly on the platform, centered or reset.

4.3.2 Rotate: Turn and rotate model (shortcut: double click)

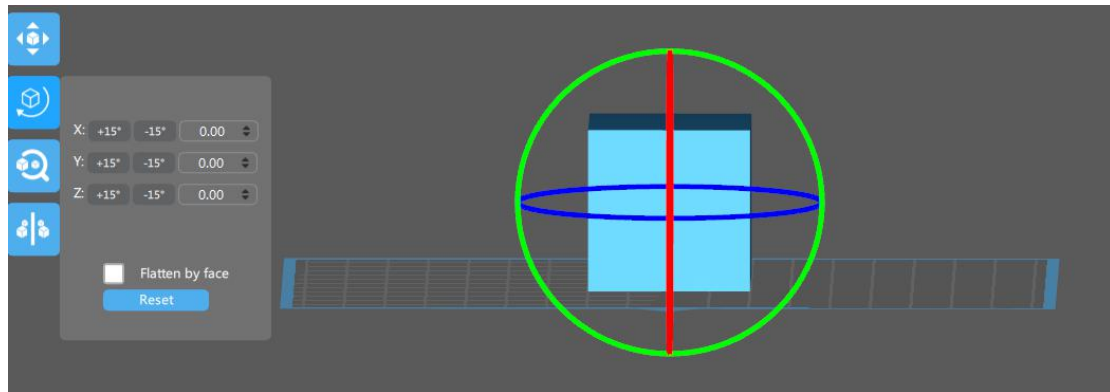

4.3.3 Zoom : Zoom on X, Y and Z axes respectively:



4.3.4 Mirror




(1) X Mirror: Mirror the current model with the X axis as the axis of symmetry

(2) Y Mirror: Mirror the current model with the Y axis as the axis of symmetry

(3) Z mirror: Mirror the current model with the Z axis as the axis of symmetry

4.4 Mouse operation (operate in the middle page)

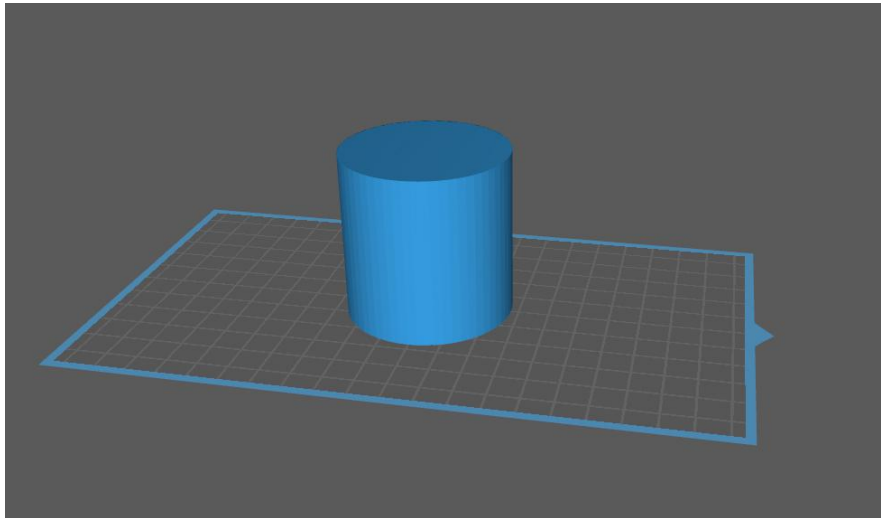

4.4.1 Left click: Click to select the model, platform, or blank space

4.4.2 Left click and hold on


(1) Left click model can move the model on the platform.

(2) Left click on the platform or blank space can move the platform

4.4.3 Right click and hold on: Rotate the platform.

4.4.4 Scroll the mouse wheel : Zoom view

4.5 Views

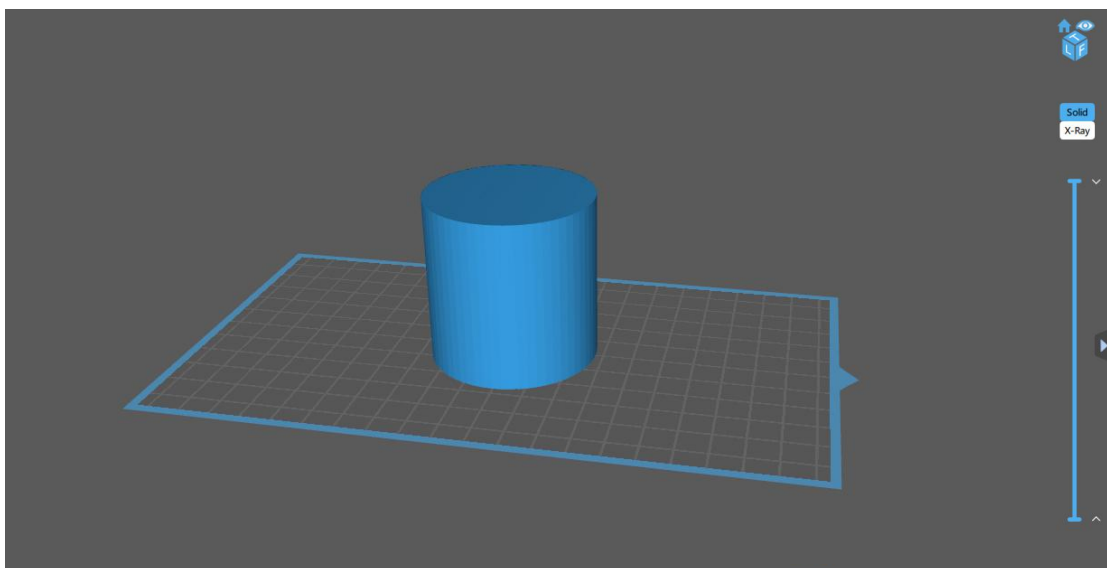

4.5.1 Move

(1) Hold down left button of mouse and drag

(2) Holds down the mouse wheel and drag

4.5.2 Rotate: Hold down right button of mouse and drag.

4.5.3 Scale: scrolling mouse wheel




4.5.4 **Home:** Make platform right front view face user



4.5.5 **Switching orthographic and perspective**



4.5.6 **Top/front/left view**

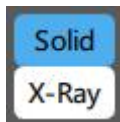

4.5.7 **Solid and X-ray perspective**





4.5.8 **Model bar:** Real-time cross-sectional view of the model;

up and down have one, two, three times the speed of the slice play and

pause buttons.





4.5.9 **Expand/Hide:** Expand and hide the content on the right

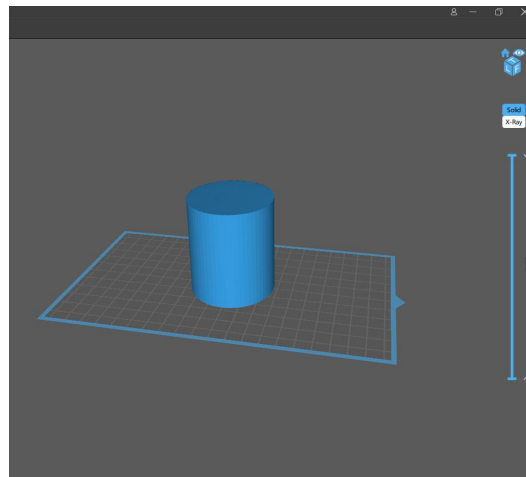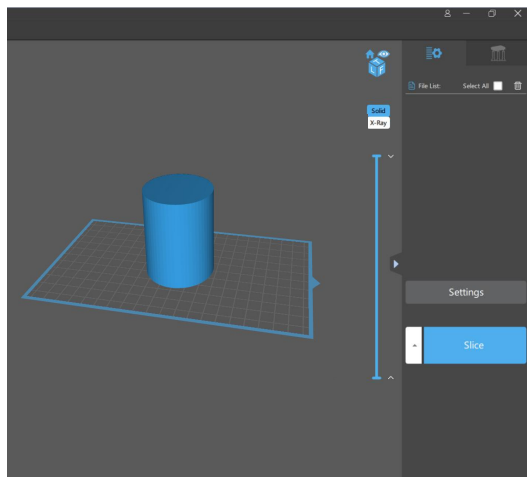

4.6 Common settings





4.6.1 File List: All the models on the platform are listed in the file list, and can be edited or deleted by choosing all/single models.

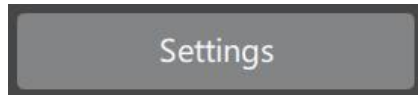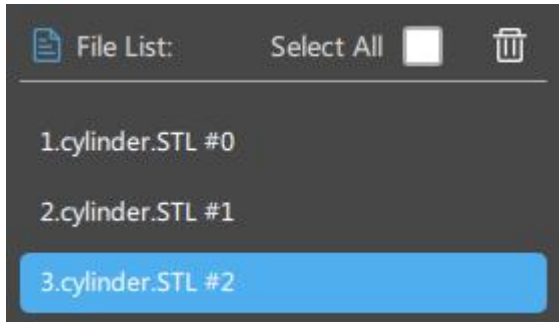

4.6.2

Slicing settings:

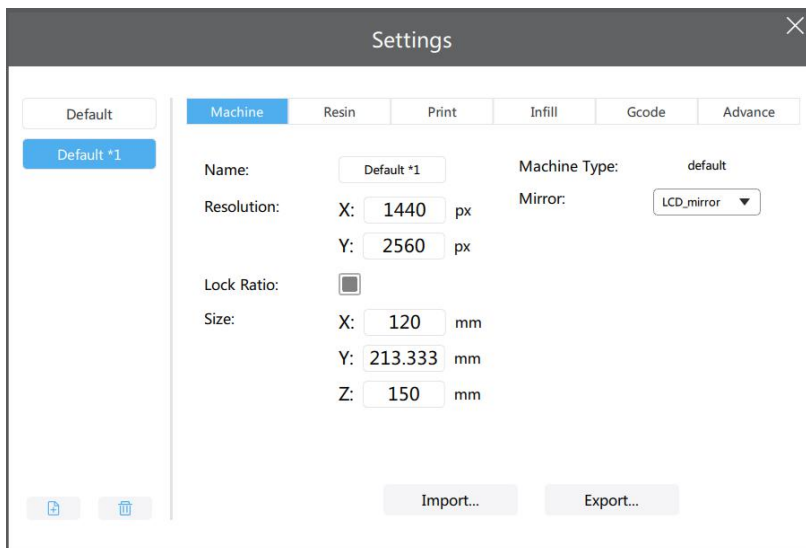

You can click on the  button in the lower left corner, add your own printer, and then set the relevant parameters.

<Import>: Import resin configuration file ;

<Export>: Export resin configuration file;

(1) Machine

The screenshot shows the 'Settings' window with the 'Machine' tab selected. The 'Name' field contains 'Default *1'. The 'Machine Type' dropdown is set to 'default'. The 'Mirror' dropdown is set to 'LCD_mirror'. The 'Resolution' section has 'X: 1440 px' and 'Y: 2560 px'. The 'Lock Ratio' checkbox is unchecked. The 'Size' section has 'X: 120 mm', 'Y: 213.333 mm', and 'Z: 150 mm'. At the bottom, there are 'Import...' and 'Export...' buttons.

<**Name**>: Printer name, you can enter the name directly for modification;
<**Resolution**>: The resolution of projector or LCD screen, which directly affects the dimensional accuracy of printing;

<**Lock Ratio**>:

Normally, the size ratio of the XY platform is equal to the resolution ratio, that is, the locking ratio.

In some cases, such as DLP projector due to accuracy or machine design reasons, the size of XY platform is not necessarily the same as the resolution ratio, it can input the actual projection size.

<**Size**>: Maximum print size of machine.

(2) resin


The screenshot shows the 'Settings' window with the 'Resin' tab selected. The 'Resin Type' dropdown is set to 'normal'. The 'Resin Density' field contains '1.1 g/ml'. The 'Resin Cost' field contains '150 ¥/L'. At the bottom, there are 'Import...' and 'Export...' buttons.

<**Resin Type**>: Different resin types have different parameters, and some resin parameters recommended by enterprises have been integrated..

<**Resin Density**>: Resin density, used to calculate weight;

<**Resin Cost**>: Resin price, used to calculate costs;

(3) Print

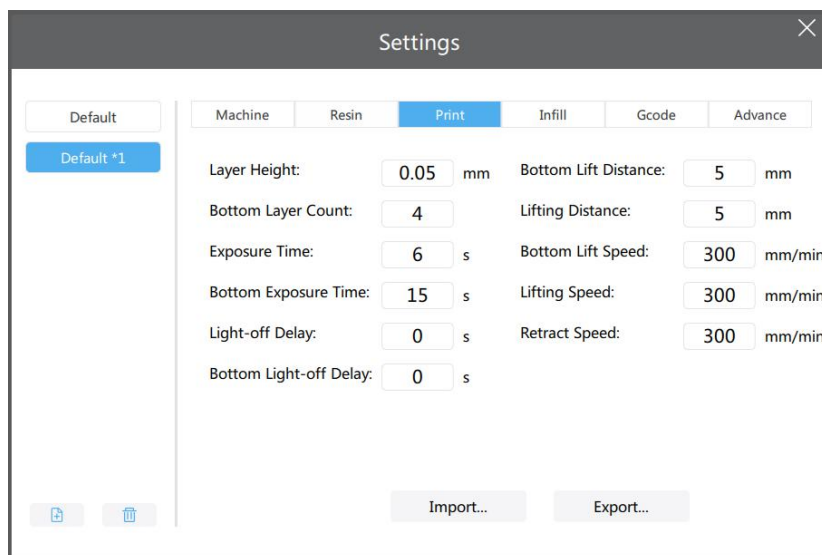

<**Layer Thickness**>: Thickness of each layer, such as 0.025/0.05/0.1mm.

<**Bottom Layer Count**>: The number of solidified layers should be strengthened at the bottom, in order to make the model stick to the platform better.

<**Exposure Time**>: Exposure Time of normal Layer

<**Bottom exposure time**>: The exposure time of the bottom layers is longer than that of the normal layers, so that the resin can be cured thoroughly and the model can adhere to the platform as far as possible.

<**Light-off Delay**>:

Final light-off time = maximum value (total time of Z-axis up and down movement, light-off delay time). For example, total Z-axis up down movement cycle is 6 seconds,

If "light-off delay" is set to 10 seconds, final light-off time is 10 seconds.

If "light-off delay" is set to 1 second, final light-off time is 6 seconds.

<**Bottom Light-off Delay**>: Light-off delay time of the bottom layers.

<**Bottom Lift Distance**>: When printing the bottom layers, the lifting distance of the forming platform.

<**Lifting Distance**>: When printing the normal layers, the lifting distance of the


forming platform.

<**Bottom Lift Speed**>: When printing the bottom layers, the lifting speed of the forming platform.

<**Lift Speed**>: When printing the normal layers, the lifting speed of the forming platform.


<**Retract Speed**>: The downward speed of the forming platform

(4) Infill

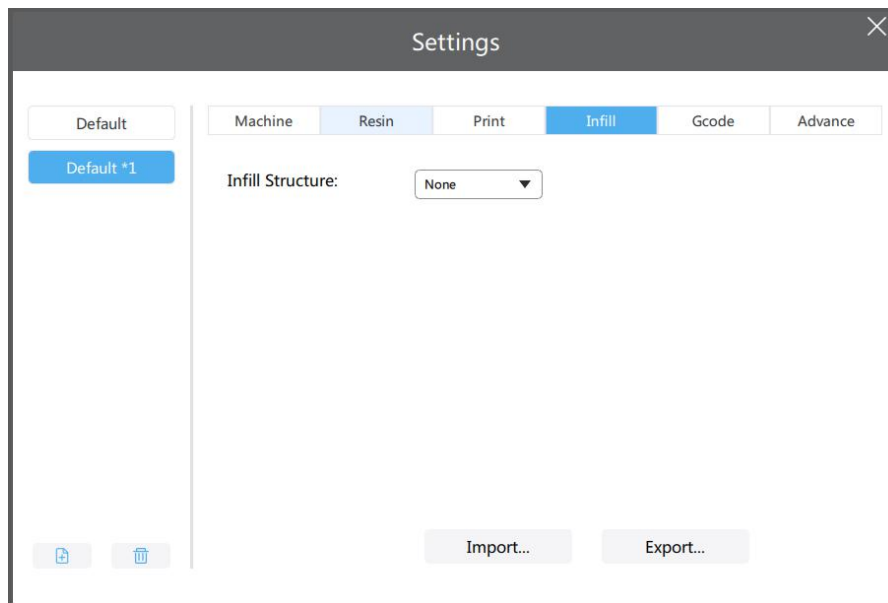

<**Infill Structure**>: The type of infill in the model, such as the grid structure.

(5) Gcode

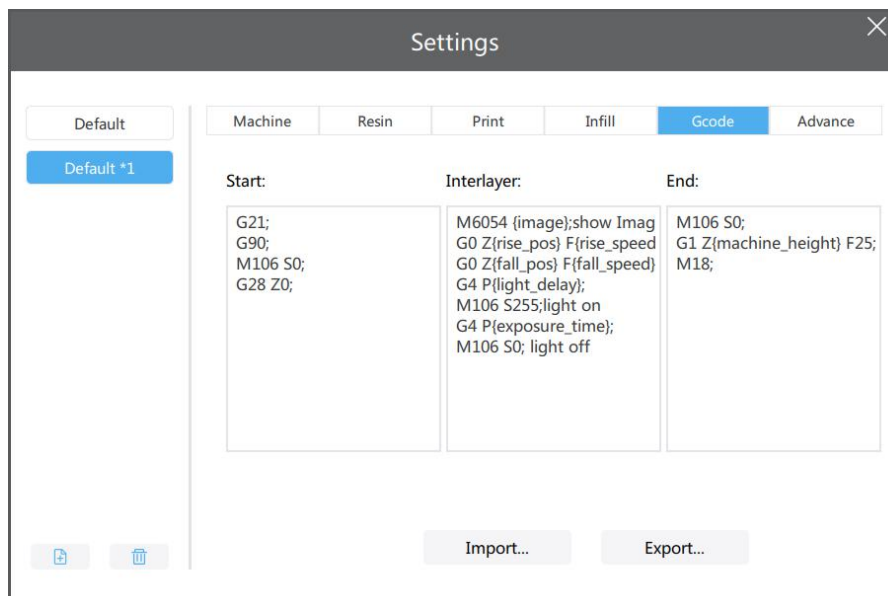

<**Start**>: Preprocessing commands executed at the beginning of printing. (Modifiable)

<**Interlayer**>: Commands executed on each layer during printing. (Modifiable)

{image} The name of the resulting exposure image

{raise_pos} Corresponding to the raised position, is an absolute coordinate value,
value = exposure position + lift height

{raise_speed} Is the lifting speed, the lifting speed = the bottom lifting speed or the
lifting speed

{fall_pos} Corresponding to the falling position, is an absolute coordinate, value =
exposure position


{fall_speed} Is the falling speed, the falling speed = the bottom falling speed or the
falling speed

{exposure_time} Corresponding to the underlying exposure time or exposure time,
the unit is ms

<**End**>: Command executed at the end of printing. (Modifiable)

{machine_height} corresponds to the height of the machine size

(6) **Advanced**

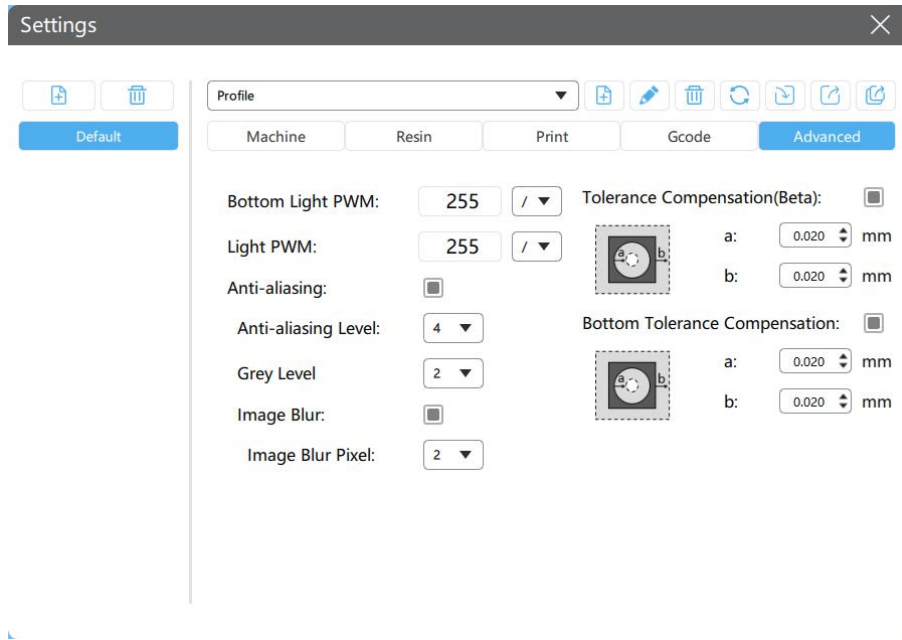


<**Bottom Light PWM**>: The intensity of the light source when printing the bottom layers.(some printers support this command)


<**Light PWM**>: The intensity of the light source when printing the normal layers.(Some printers support this command)

<**Anti-aliasing**>: Turn on anti-aliasing to make the model surface smoother.

As shown below: anti-aliasing is not selected, , anti-aliasing is selected

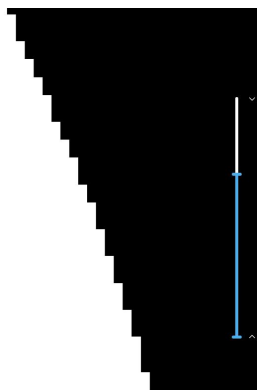

No

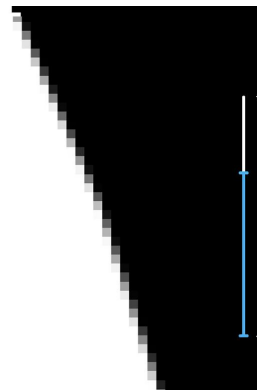

X 4

<**Anti-aliasing Level**>: The level selection to achieve image edge triangle serration.


<**Grey Level**>: The level selection to achieve image edge triangle serration. From 0 to 8 levels. The higher level results in the lighter color of the edge.



Level 0



 Level 4



Level 6




Level 8

<Image Blur>: Blur the edges of the image.

<Image Blur Pixel>: Level settings for blurring the edges of the image.



 Level 2



Level 3



Level 5

<Tolerance Compensation>: The Inner Diameter Size Compensation Of The Normal Printing Layer. When The Value Is Positive, The Size Of The Entity Increases, And The Inner Diameter Size Increases; When The Value Is Negative, The Size Of The Entity Decreases, And The Inner Diameter Size Decreases. Caution: When the inner diameter and outer diameter of the slice data are different from those of the model, the inner diameter of the model will be recognized as the outer diameter in the slice data for compensation.

<Bottom Tolerance Compensation>: The Inner Diameter Size Compensation Of The


Bottom Printing Layers. When The Value Is Positive, The Size Of The Entity Increases, And The Inner Diameter Size Increases; When The Value Is Negative, The Size Of The Entity Decreases, And The Inner Diameter Size Decreases. Caution: When the inner diameter and outer diameter of the slice data are different from those of the model, the inner diameter of the model will be recognized as the outer diameter in the slice data for compensation.

Click the link below to learn more about Tolerance Compensation:

[How to Use Tolerance Compensation on CHITUBOX](#)


4.6.3 Slice

Click on the “Slice” to start the model slicing process. (you can choose the corresponding parameters to slice)

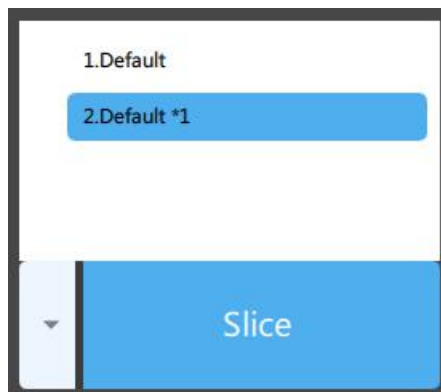


4.6.4 Slice Preview

Support for slice layer and solid model preview.

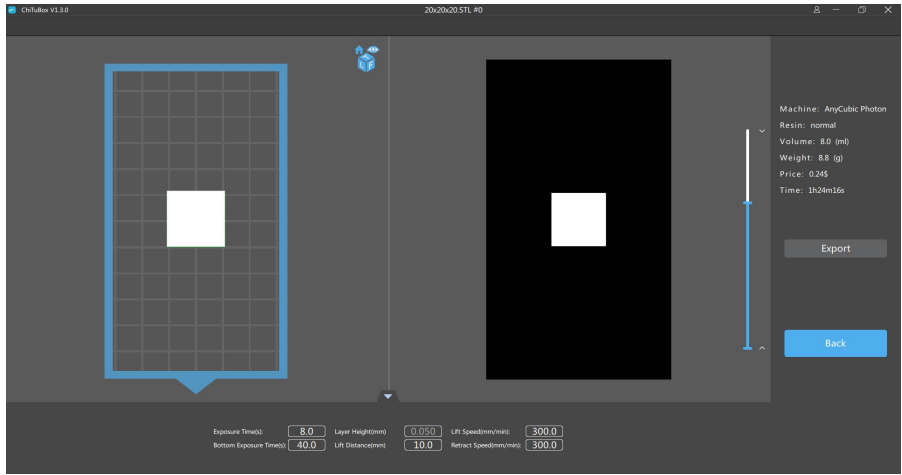

4.7 Support setting

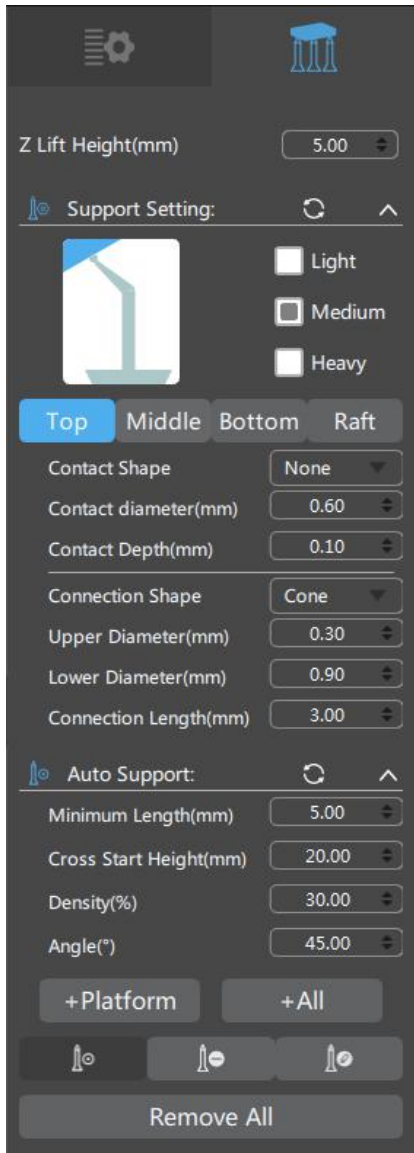

4.7.1 Z Lift Height (the default is 5mm), can be customized

4.7.2 Support setting ( refresh  fold  expand)


(1) Select the size of the support, there are three choices: Light, Medium and Heavy.


(2) Top: Set the parameters of the top of the support, which can be customized by the user.


(3) Middle: Set the parameters of the middle of the support, which can be customized by the user.


(4) Bottom: Set the parameters of the bottom of the support, which can be customized by the user.

(5) Raft: Set the parameters of the raft, which can be customized by the user.


4.7.3 Auto support ( refresh  fold  expand) : Set the parameters of the auto support, which can be customized by the user.

(1)  Click this button to automatically add support to the model (no support will be generated on the model).

(2)  Click this button to automatically add support to the model (support is also generated on the model).

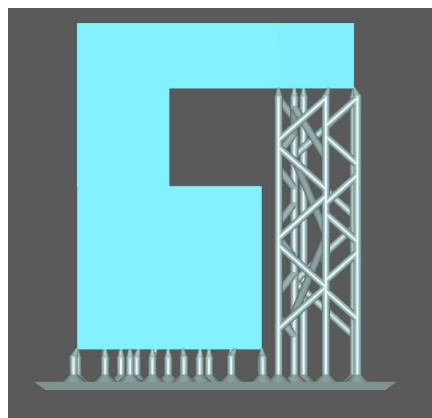

+Platform

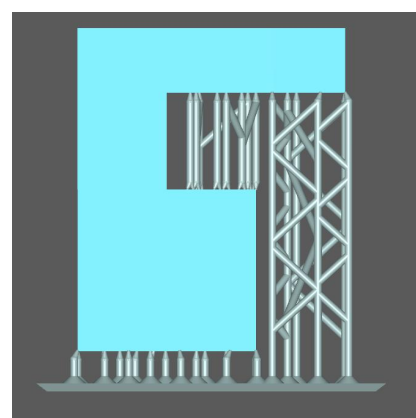

+All

4.7.4 Add Support: Add support in manual mode.

4.7.5 Delete support: Delete support in manual mode.

4.7.6 Edit Support: Edit selected support.



4.7.7 Remove all: Remove all support.

4.8 Printing process




4.8.1 Add new printer(Or select an existing printer)

in the settings menu and set the parameters. If you don't have your machine in the list, you can choose Default and set the parameters yourself.

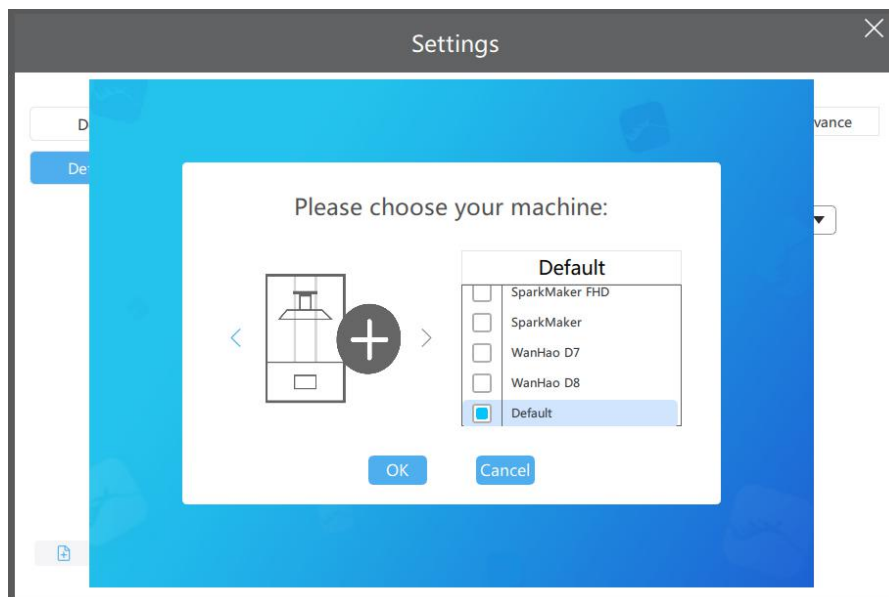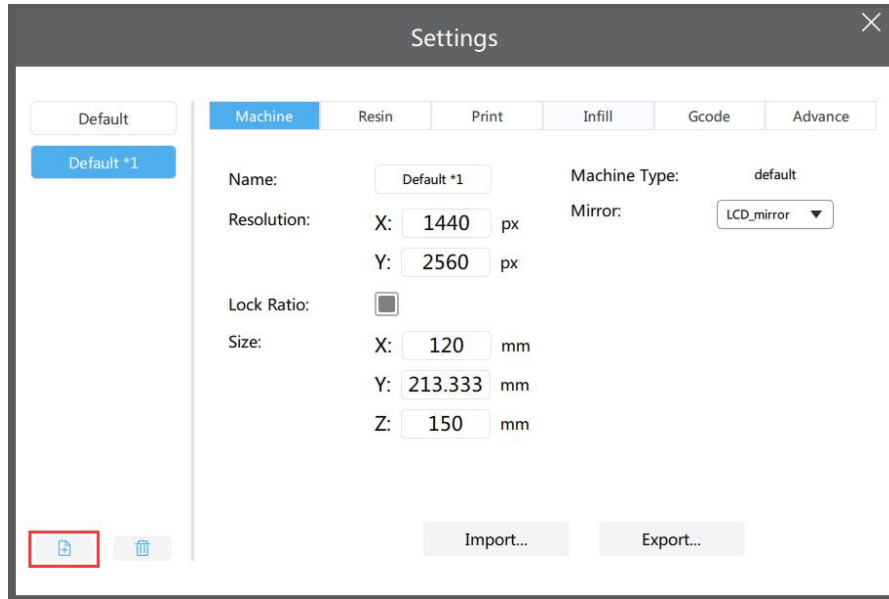

4.8.2 Slice: After setting all the parameters, click the slice menu.

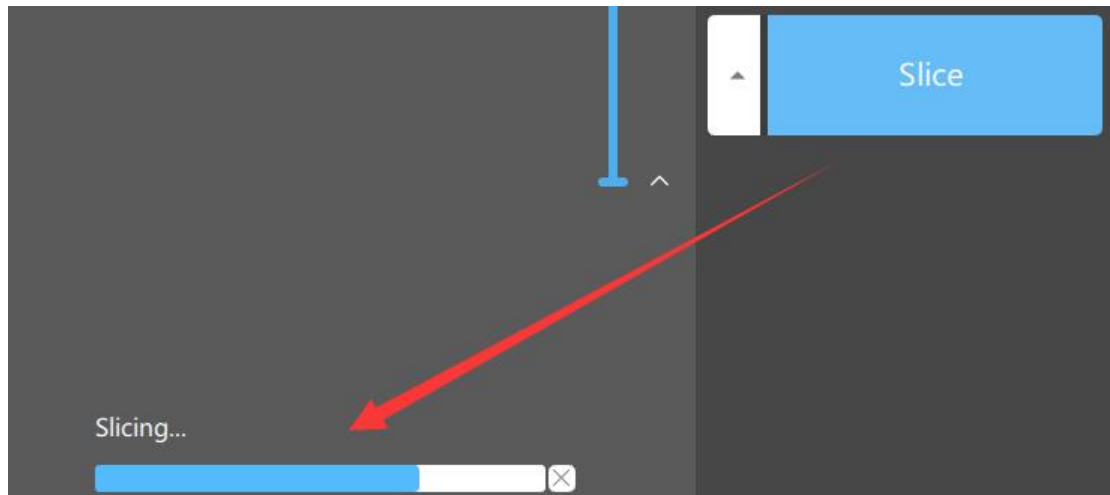

4.8.3 Preview and Export: After the slice is finished, it will automatically enter the preview mode (drag the upper slider to preview the layer). you can save the slice file or return to re-edit.

