



The steps to replace the 6.08-inch print screen of the Alkaid printer are as follows:



1. Use appropriate tools to remove all screws at the bottom of the printer and keep them properly

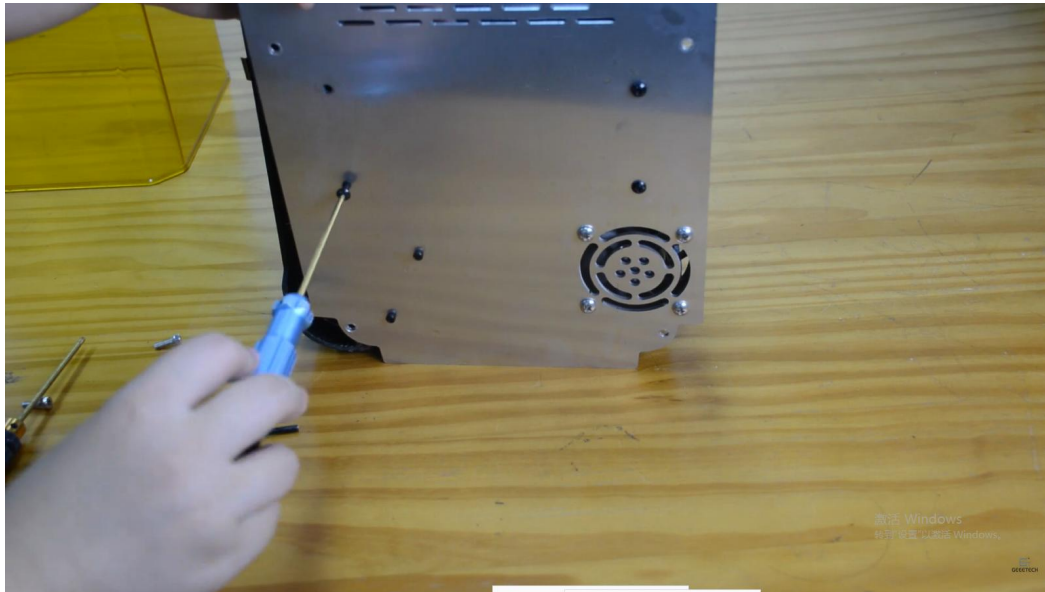


2. Carefully unplug the print screen cable and avoid damaging the cable

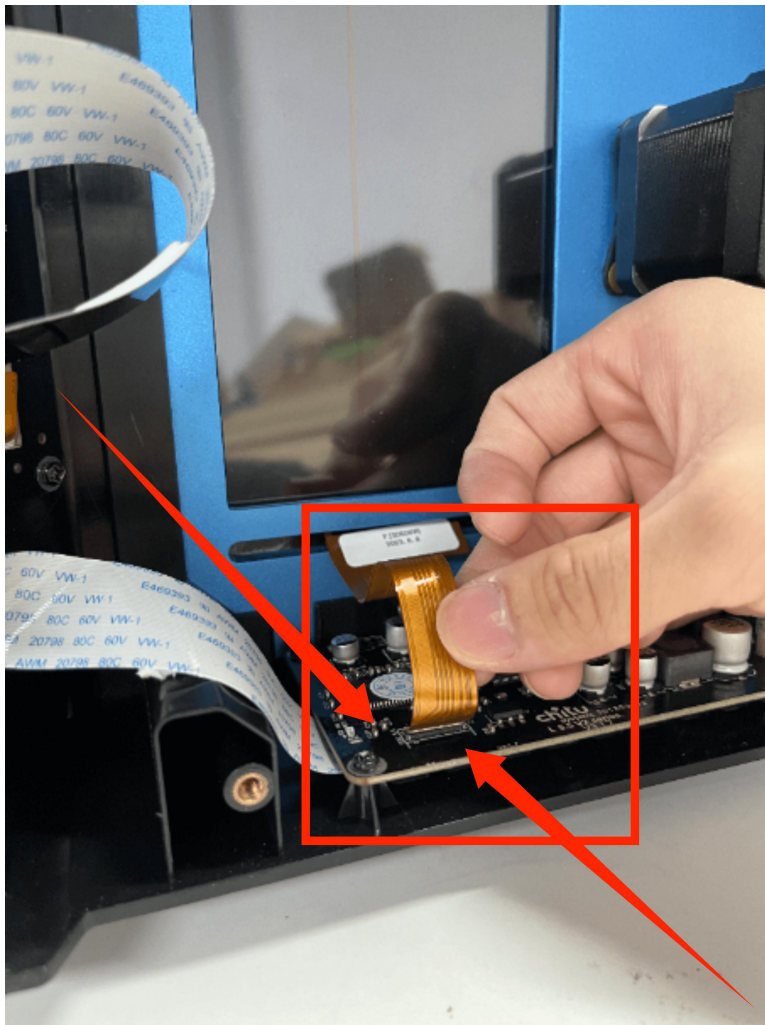


3. Remove the TF tape and slowly take out the old print screen that needs to be replaced

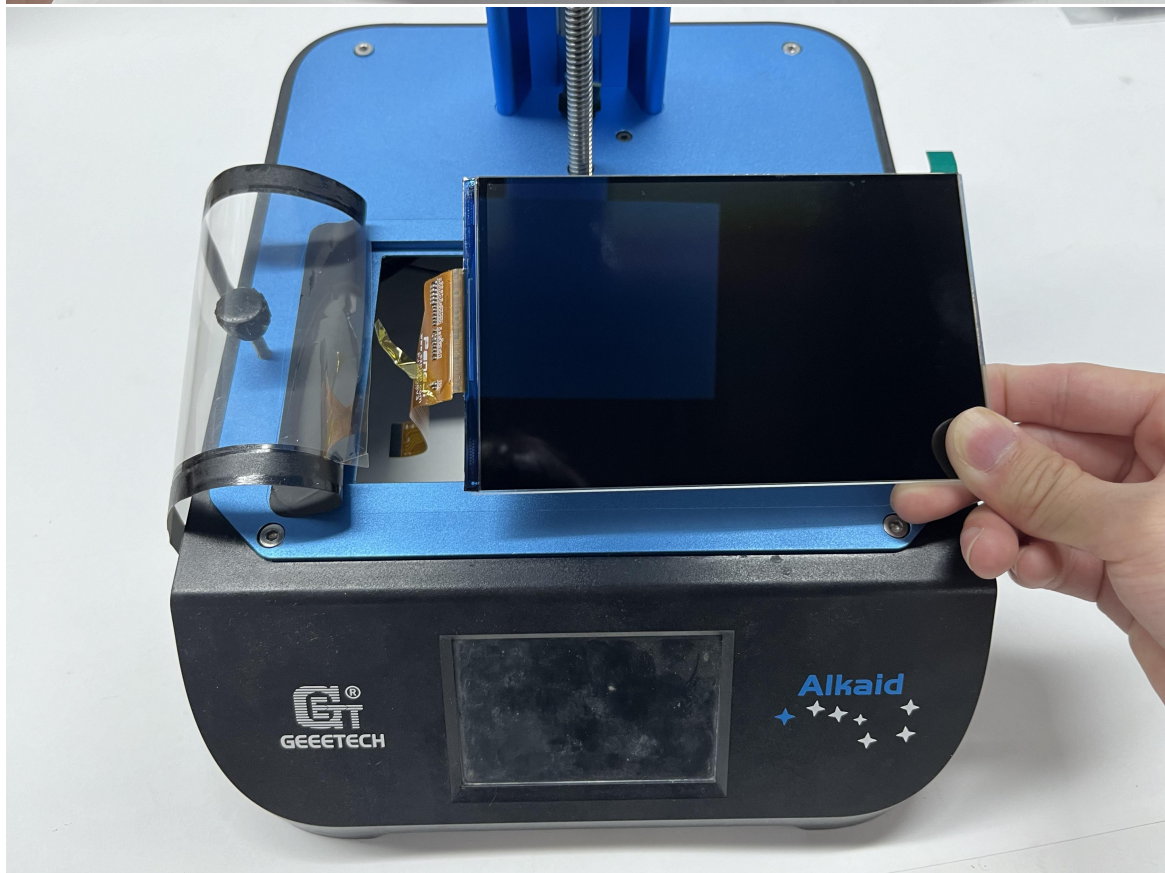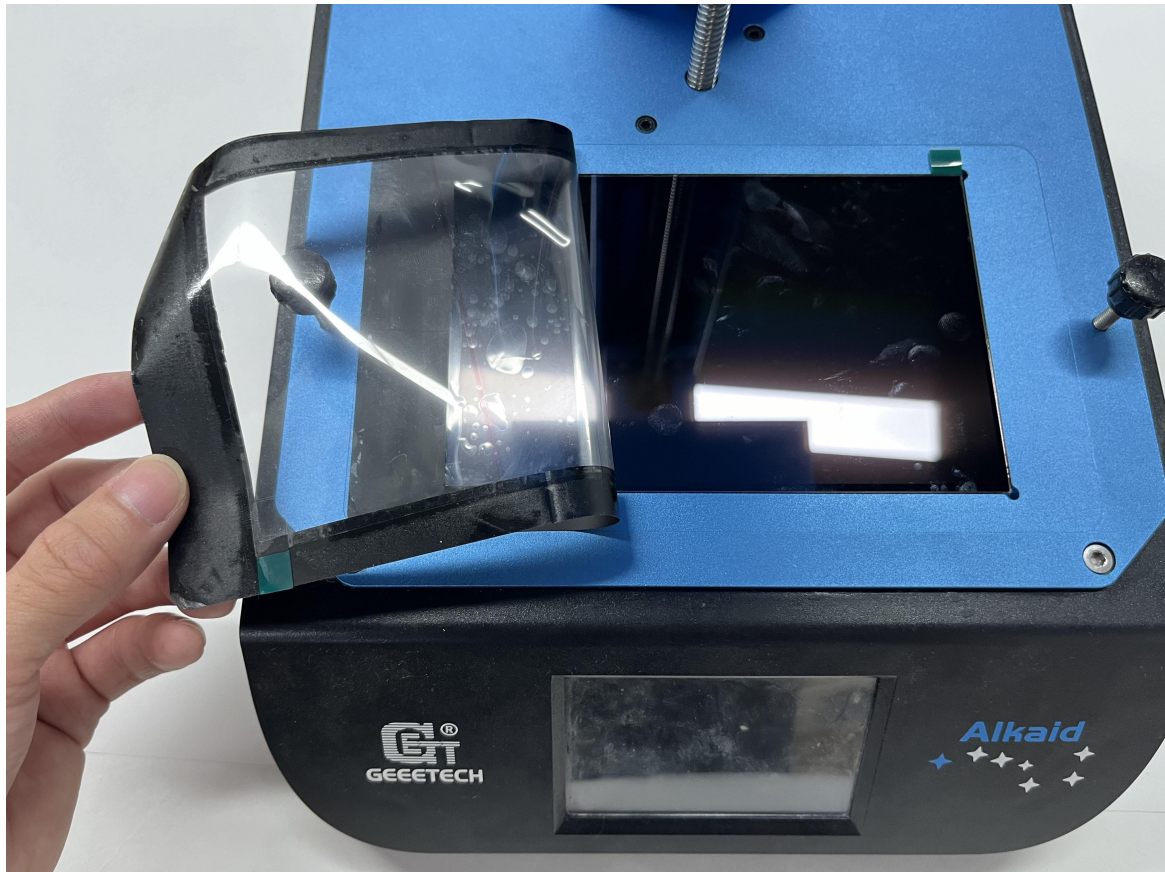

4. Install the new print screen in place and secure it firmly with TF tape, paying special attention to where the connection wires are placed

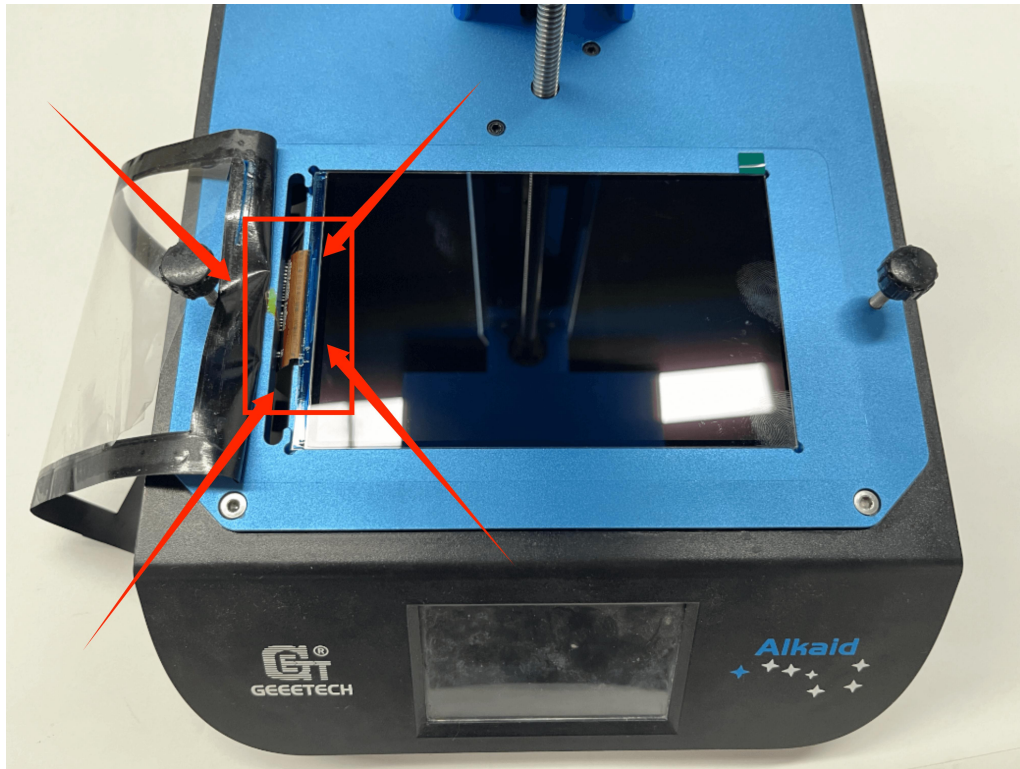

5. Slowly tighten the connection cable of the print screen to ensure that it has been successfully installed

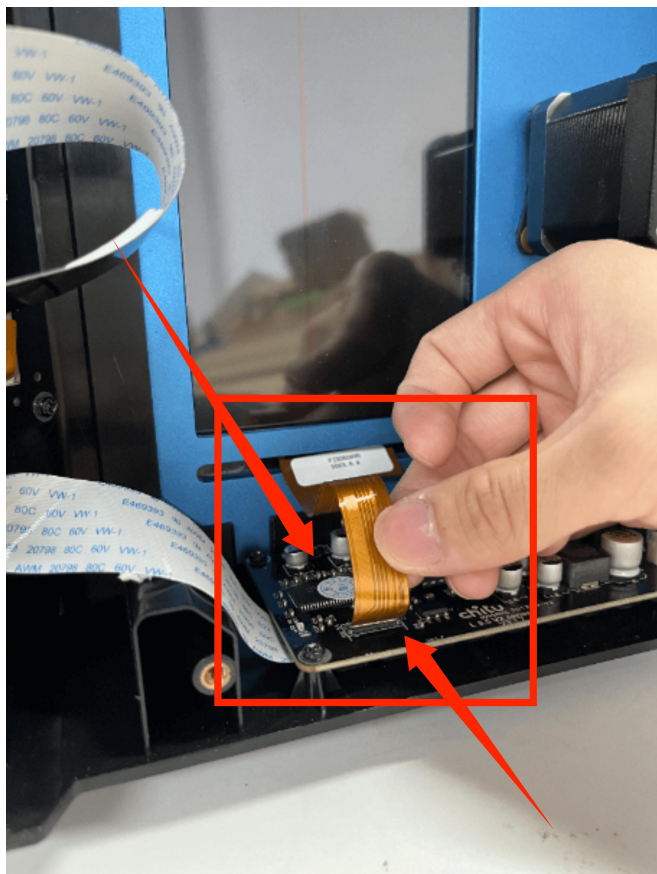

6. Gently close the back cover, make sure nothing is loose, and then tighten all the bottom screws.

